

KUSB-3116

User's Manual

KUSB3116-900-01 Rev. A / January 2005

WARRANTY

Keithley Instruments, Inc. warrants this product to be free from defects in material and workmanship for a period of 3 years from date of shipment.

Keithley Instruments, Inc. warrants the following items for 90 days from the date of shipment: probes, cables, rechargeable batteries, diskettes, and documentation.

During the warranty period, we will, at our option, either repair or replace any product that proves to be defective.

To exercise this warranty, write or call your local Keithley representative, or contact Keithley headquarters in Cleveland, Ohio. You will be given prompt assistance and return instructions. Send the product, transportation prepaid, to the indicated service facility. Repairs will be made and the product returned, transportation prepaid. Repaired or replaced products are warranted for the balance of the original warranty period, or at least 90 days.

LIMITATION OF WARRANTY

This warranty does not apply to defects resulting from product modification without Keithley's express written consent, or misuse of any product or part. This warranty also does not apply to fuses, software, non-rechargeable batteries, damage from battery leakage, or problems arising from normal wear or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE. THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES.

NEITHER KEITHLEY INSTRUMENTS, INC. NOR ANY OF ITS EMPLOYEES SHALL BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF ITS INSTRUMENTS AND SOFTWARE EVEN IF KEITHLEY INSTRUMENTS, INC., HAS BEEN ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. SUCH EXCLUDED DAMAGES SHALL INCLUDE, BUT ARE NOT LIMITED TO: COSTS OF REMOVAL AND INSTALLATION, LOSSES SUSTAINED AS THE RESULT OF INJURY TO ANY PERSON, OR DAMAGE TO PROPERTY.

KEITHLEY

A GREATER MEASURE OF CONFIDENCE

Keithley Instruments, Inc.

Corporate Headquarters • 28775 Aurora Road • Cleveland, Ohio 44139
440-248-0400 • Fax: 440-248-6168 • 1-888-KEITHLEY (534-8453) • www.keithley.com

KUSB-3116 User's Manual

©2005, Keithley Instruments, Inc.
All rights reserved.
First Printing, January 2005
Cleveland, Ohio, U.S.A.
Document Number: KUSB3116-900-01A Rev. A

Manual Print History

The print history shown below lists the printing dates of all Revisions and Addenda created for this manual. The Revision Level letter increases alphabetically as the manual undergoes subsequent updates. Addenda, which are released between Revisions, contain important change information that the user should incorporate immediately into the manual. Addenda are numbered sequentially. When a new Revision is created, all Addenda associated with the previous Revision of the manual are incorporated into the new Revision of the manual. Each new Revision includes a revised copy of this print history page.

Revision A (Document Number KUSB3116-900-01A)..... January 2005

The following safety precautions should be observed before using this product and any associated instrumentation. Although some instruments and accessories would normally be used with non-hazardous voltages, there are situations where hazardous conditions may be present.

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read and follow all installation, operation, and maintenance information carefully before using the product. Refer to the manual for complete product specifications.

If the product is used in a manner not specified, the protection provided by the product may be impaired.

The types of product users are:

Responsible body is the individual or group responsible for the use and maintenance of equipment, for ensuring that the equipment is operated within its specifications and operating limits, and for ensuring that operators are adequately trained.

Operators use the product for its intended function. They must be trained in electrical safety procedures and proper use of the instrument. They must be protected from electric shock and contact with hazardous live circuits.

Maintenance personnel perform routine procedures on the product to keep it operating properly, for example, setting the line voltage or replacing consumable materials. Maintenance procedures are described in the manual. The procedures explicitly state if the operator may perform them. Otherwise, they should be performed only by service personnel.

Service personnel are trained to work on live circuits, and perform safe installations and repairs of products. Only properly trained service personnel may perform installation and service procedures.

Keithley products are designed for use with electrical signals that are rated Measurement Category I and Measurement Category II, as described in the International Electrotechnical Commission (IEC) Standard IEC 60664. Most measurement, control, and data I/O signals are Measurement Category I and must not be directly connected to mains voltage or to voltage sources with high transient over-voltages. Measurement Category II connections require protection for high transient over-voltages often associated with local AC mains connections. Assume all measurement, control, and data I/O connections are for connection to Category I sources unless otherwise marked or described in the Manual.

Exercise extreme caution when a shock hazard is present. Lethal voltage may be present on cable connector jacks or test fixtures. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30V RMS, 42.4V peak, or 60VDC are present. **A good safety practice is to expect that hazardous voltage is present in any unknown circuit before measuring.**

Operators of this product must be protected from electric shock at all times. The responsible body must ensure that operators are prevented access and/or insulated from every connection point. In some cases, connections must be exposed to potential human contact. Product operators in these circumstances must be trained to protect themselves from the risk of electric shock. If the circuit is capable of operating at or above 1000 volts, **no conductive part of the circuit may be exposed.**

Do not connect switching cards directly to unlimited power circuits. They are intended to be used with impedance limited sources. NEVER connect switching cards directly to AC mains. When connecting sources to switching cards, install protective devices to limit fault current and voltage to the card.

Before operating an instrument, make sure the line cord is connected to a properly grounded power receptacle. Inspect the connecting cables, test leads, and jumpers for possible wear, cracks, or breaks before each use.

When installing equipment where access to the main power cord is restricted, such as rack mounting, a separate main input power disconnect device must be provided, in close proximity to the equipment and within easy reach of the operator.

For maximum safety, do not touch the product, test cables, or any other instruments while power is applied to the circuit under test. ALWAYS remove power from the entire test system and discharge any capacitors before: connecting or disconnecting cables or jumpers, installing or removing switching cards, or making internal changes, such as installing or removing jumpers.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface capable of withstanding the voltage being measured.


The instrument and accessories must be used in accordance with its specifications and operating instructions or the safety of the equipment may be impaired.


Do not exceed the maximum signal levels of the instruments and accessories, as defined in the specifications and operating information, and as shown on the instrument or test fixture panels, or switching card.


When fuses are used in a product, replace with same type and rating for continued protection against fire hazard.


Chassis connections must only be used as shield connections for measuring circuits, NOT as safety earth ground connections.

If you are using a test fixture, keep the lid closed while power is applied to the device under test. Safe operation requires the use of a lid interlock.

If a  screw is present, connect it to safety earth ground using the wire recommended in the user documentation.

The  symbol on an instrument indicates that the user should refer to the operating instructions located in the manual.

The  symbol on an instrument shows that it can source or measure 1000 volts or more, including the combined effect of normal and common mode voltages. Use standard safety precautions to avoid personal contact with these voltages.

The  symbol indicates a connection terminal to the equipment frame.

The **WARNING** heading in a manual explains dangers that might result in personal injury or death. Always read the associated information very carefully before performing the indicated procedure.

The **CAUTION** heading in a manual explains hazards that could damage the instrument. Such damage may invalidate the warranty.

Instrumentation and accessories shall not be connected to humans. Before performing any maintenance, disconnect the line cord and all test cables.

To maintain protection from electric shock and fire, replacement components in mains circuits, including the power transformer, test leads, and input jacks, must be purchased from Keithley Instruments. Standard fuses, with applicable national safety approvals, may be used if the rating and type are the same. Other components that are not safety related may be purchased from other suppliers as long as they are equivalent to the original component. (Note that selected parts should be purchased only through Keithley Instruments to maintain accuracy and functionality of the product.) If you are unsure about the applicability of a replacement component, call a Keithley Instruments office for information.

To clean an instrument, use a damp cloth or mild, water based cleaner. Clean the exterior of the instrument only. Do not apply cleaner directly to the instrument or allow liquids to enter or spill on the instrument. Products that consist of a circuit board with no case or chassis (e.g., data acquisition board for installation into a computer) should never require cleaning if handled according to instructions. If the board becomes contaminated and operation is affected, the board should be returned to the factory for proper cleaning/servicing.

Table of Contents

About this Manual	xi
Intended Audience.....	xi
How this Manual is Organized	xi
Conventions Used in this Manual	xii
Related Information.....	xii
Where To Get Help.....	xiii
Chapter 1: Overview	1
Hardware Features.....	2
Supported Software	4
Chapter 2: Principles of Operation	5
Analog Input Features	7
Input Resolution	7
Analog Input Channels	7
Specifying a Single Analog Input Channel	9
Specifying One or More Analog Input Channels	9
Specifying the Digital Input Port in the Analog Input Channel-Gain List	10
Specifying Counter/Timers in the Analog Input Channel-Gain List	11
Performing Dynamic Digital Output Operations	13
Input Ranges and Gains.....	14
Specifying the Gain for a Single Channel	15
Specifying the Gain for One or More Channels	15
Input Sample Clock Sources	16

Analog Input Conversion Modes	17
Continuous Scan Mode	18
Triggered Scan Mode	19
Internally Retriggered Scan Mode	20
Externally Retriggered Scan Mode	21
Input Triggers	22
Data Format and Transfer	23
Error Conditions	25
Analog Output Features	26
Output Resolution	26
Analog Output Channels	26
Specifying a Single Analog Output Channel	27
Specifying Multiple Analog Output Channels and/or the Digital Output Port	27
Output Ranges and Gains	28
Output Triggers	28
Output Clocks	29
Output Conversion Modes	30
Continuously Paced Analog Output	31
Waveform Generation	32
Data Format and Transfer	33
Error Conditions	34
Digital I/O Features	35
Digital I/O Lines	35
Operation Modes	36
Counter/Timer Features	38
C/T Channels	38
C/T Clock Sources	39
Gate Types	40
Pulse Output Types and Duty Cycles	41

Counter/Timer Operation Modes	42
Event Counting	43
Up/Down Counting	43
Frequency Measurement	44
Edge-to-Edge Measurement	45
Rate Generation	46
One-Shot	47
Repetitive One-Shot	48
Chapter 3: Supported Device Driver Capabilities.	51
Chapter 4: Programming Flowcharts.	63
Single-Value Operations	65
Continuous A/D Operations	67
Continuous D/A Operations	69
Continuous Digital Input Operations	71
Continuous Digital Output Operations	72
Event Counting Operations	73
Up/Down Counting Operations	75
Frequency Measurement Operations	77
Edge-to-Edge Measurement Operations	79
Pulse Output Operations.	81
Simultaneous Operations	83
Chapter 5: Troubleshooting	97
General Checklist	98
Service and Support.	101
Appendix A: Specifications	103

Appendix B: Connector Pin Assignments	113
Analog Input Connector	114
Digital I/O Connector	116
Analog Output, Counter/Timer, Clock, and Trigger Connector	118
Index	121

About this Manual

This manual describes the features of the KUSB-3116 module, the capabilities of the device driver, and how to program the KUSB-3116 module using DT-Open Layers™ software. Troubleshooting information is also provided.

Intended Audience

This document is intended for engineers, scientists, technicians, or others responsible for using and/or programming the KUSB-3116 module for data acquisition operations in the Microsoft® Windows® 2000 or Windows XP operating system. It is assumed that you have some familiarity with data acquisition principles and that you understand your application.

How this Manual is Organized

This manual is organized as follows:

- [Chapter 1, “Overview,”](#) describes the major features of the KUSB-3116 module, as well as the supported software and accessories for the modules.
- [Chapter 2, “Principles of Operation,”](#) describes all of the features of the KUSB-3116 module and how to use them in your application.
- [Chapter 3, “Supported Device Driver Capabilities,”](#) lists the data acquisition subsystems and the associated features accessible using the device driver.
- [Chapter 4, “Programming Flowcharts,”](#) describes the processes you must follow to program the subsystems of the KUSB-3116 module using DT-Open Layers-compliant software.

- [Chapter 5, “Troubleshooting,”](#) provides information that you can use to resolve problems with the KUSB-3116 module and device driver, should they occur.
- [Appendix A, “Specifications,”](#) lists the specifications of the KUSB-3116 module.
- [Appendix B, “Connector Pin Assignments,”](#) shows the pin assignments for the connectors on the KUSB-3116 module.
- An index completes this manual.

Conventions Used in this Manual

The following conventions are used in this manual:

- Notes provide useful information or information that requires special emphasis, cautions provide information to help you avoid losing data or damaging your equipment, and warnings provide information to help you avoid catastrophic damage to yourself or your equipment.
- Items that you select or type are shown in **bold**.

Related Information

Refer to the following documents for more information on using the KUSB-3116 module:

- *KUSB-3116 Getting Started Manual*. This manual, included on the CD that is shipped with the module, describes the how to install the KUSB-3116 module and related software.
- *DataAcq SDK User’s Manual*. For programmers who are developing their own application programs using the Microsoft C compiler, this manual describes how to use the DT-Open Layers™ DataAcq SDK™ in Windows 2000 or Windows XP to access the capabilities of your module.

- *DTx-EZ Getting Started Manual.* This manual describes how to use the ActiveX controls provided in DTx-EZ™ to access the capabilities of your module in Microsoft Visual Basic® or Visual C++®.
- *DT-LV Link Getting Started Manual.* This manual describes how to use DT-LV Link™ with the LabVIEW® graphical programming language to access the capabilities of your module.
- Microsoft Windows 2000 or Windows XP documentation.
- USB web site (<http://www.usb.org>).

Where To Get Help

Should you run into problems installing or using your KUSB-3116 module, please call the Keithley Technical Support Department.



Overview

Hardware Features	2
Supported Software	4

Hardware Features

The KUSB-3116 is a high-performance, multifunction data acquisition modules for the USB (Ver. 2.0 or Ver. 1.1) bus. The key hardware features of the KUSB-3116 module are as follows:

- Installed in a metal BNC box to provide easy connections.
- Simultaneous operation of analog input, analog output, digital I/O, and counter/timer subsystems.
- Analog input subsystem:
 - 16-bit A/D converter.
 - Throughput rate up to 500 kSamples/s.
 - 16 single-ended or 8 differential analog input channels.
 - Programmable gain of 1, 2, 4, or 8 provides input ranges of ± 10 , ± 5 , ± 2.5 , and ± 1.25 V.
 - 1024-location channel-gain list. You can cycle through the channel-gain list using continuous scan mode or triggered scan mode. The maximum sampling rate when using the channel-gain list is 500 kSamples/s.
- Analog output subsystem:
 - Four 16-bit D/A converters.
 - Output rate up to 500 kSamples/s.
 - Output range of ± 10 V.
 - The DACs are deglitched to prevent noise from interfering with the output signal.
 - Output channel list. You can cycle through the output channel list using continuous output mode or waveform mode. For waveform generation mode, you can simultaneously update all four DACs at 500 kS/s per channel; for continuous output mode, you can simultaneously update all four DACs at 250 kS/s per channel.

- Digital I/O subsystem:
 - One digital input port, consisting of 16 digital input lines. You can program any of the first eight digital input lines to perform interrupt-on-change operations. You can read the value of the digital input port using the analog input channel-gain list.
 - One digital output port, consisting of 16 digital output lines. You can output the value of the digital output port using the output channel list.
 - An additional dynamic digital output line that changes state whenever an analog input channel is read.
- Five 32-bit counter/timer (C/T) channels that perform event counting, up/down counting, frequency measurement, edge-to-edge measurement, continuous pulse output, one-shot, and repetitive one-shot operations. You can read the value of one or more of the C/T channels using the analog input channel-gain list.
- External or internal clock source.
- Trigger operations using a software command, an analog threshold value, or an external digital input value as the trigger event.
- 500 V galvanic isolation barrier that prevents ground loops to maximize analog signal integrity and protect your computer.

Supported Software

The following software is available for use with the KUSB-3116 module:

- **Device Driver** –This software is provided on the CD shipped with the module. The device driver allows you to use a KUSB-3116 module with any of the supported software packages or utilities. Refer to the *KUSB-3116 Getting Started Manual* for more information on loading and configuring the device driver.
- **Quick Data Acq application** –This application provides a quick way to get a KUSB-3116 module up and running. Using the Quick Data Acq application, you can verify the features of the module, display data on the screen, and save data to disk.
- **DataAcq SDK** –This DT-Open Layers Software Develop Kit (SDK) allows programmers to develop application programs for the KUSB-3116 using the Microsoft C compiler in Windows 2000 or Windows XP.
- **DTx-EZ** –This software package contains ActiveX controls that allow Microsoft Visual Basic® or Visual C++® programmers to access the capabilities of the KUSB-3116 module.
- **DT-LV Link** –This software package allows LabVIEW® programmers to access the capabilities of the KUSB-3116 module.



2

Principles of Operation

Analog Input Features	7
Analog Output Features	26
Digital I/O Features	35
Counter/Timer Features	38

Figure 1 shows a block diagram of the KUSB-3116 module.

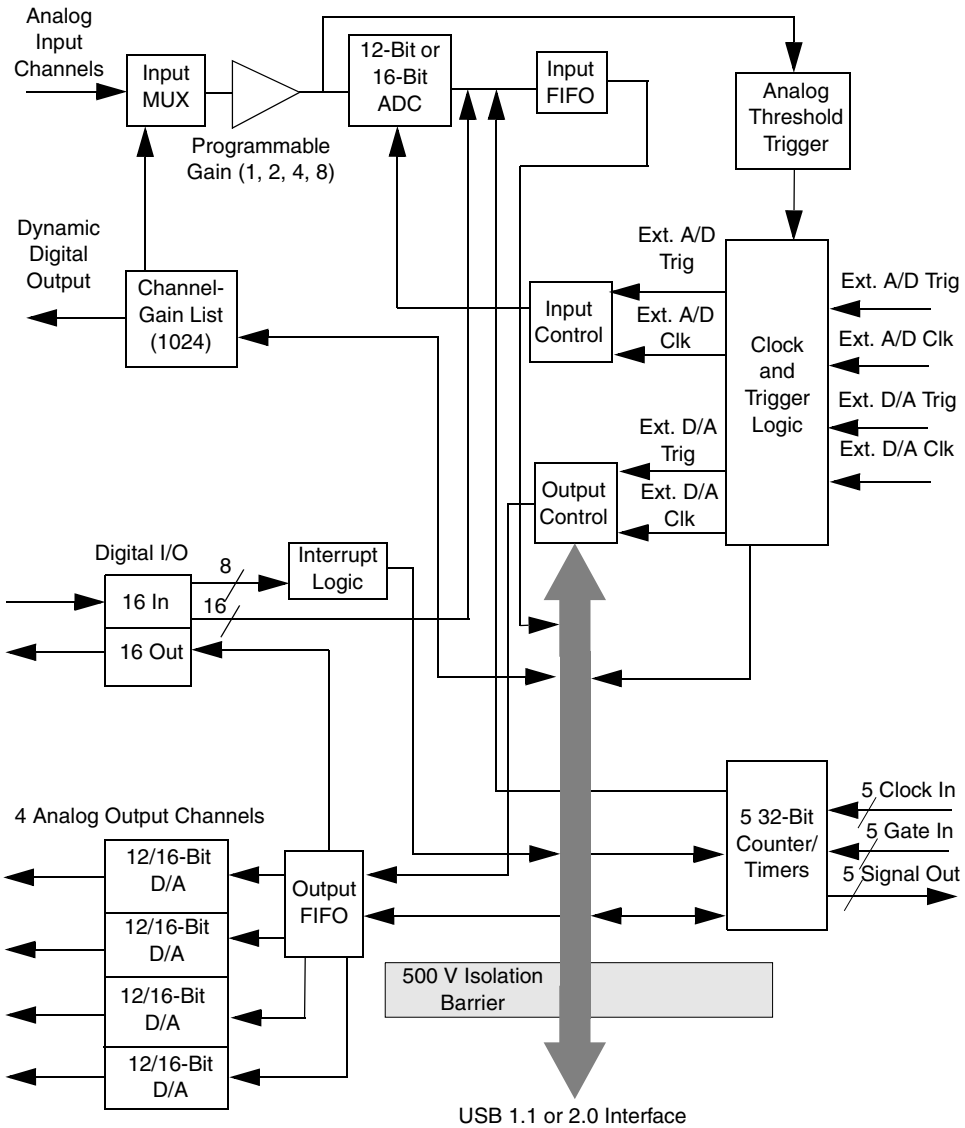


Figure 1: Block Diagram of the KUSB-3116 Module

Analog Input Features

This section describes the following features of analog input (A/D) operations on the KUSB-3116 module:

- Input resolution, described on this page;
- Analog input channels, described on [page 7](#);
- Input ranges and gains, described on [page 14](#);
- Input sample clock sources, described on [page 16](#);
- Analog input conversion modes, described on [page 17](#);
- Input triggers, described on [page 22](#);
- Data format and transfer, described on [page 23](#); and
- Error conditions, described on [page 25](#).

2

Input Resolution

The resolution of the KUSB-3116 module is fixed at 16 bits. You cannot specify the resolution in software.

Analog Input Channels

You can use the analog input channels in one of the following configurations:

- **Single-ended** –Single-ended channels are useful when you are measuring high-level signals, when noise is not significant, when the source of the input is close to the module, and when all the input signals are referred to the same common ground.

- **Pseudo-Differential** –Pseudo-differential channels are useful when noise or common-mode voltage (the difference between the ground potentials of the signal source and the ground of the screw terminal panel or between the grounds of other signals) exists and when the differential configuration is not suitable for your application. This option provides less noise rejection than the differential configuration; however, more analog input channels are available.
- **Differential** –Differential channels are useful when you want to measure low-level signals, when noise is a significant part of the signal, or when common-mode voltage exists.

The BNC connectors on the KUSB-3116 module are configured in the single-ended channel configuration. To access the differential signals, you need to use the analog input connector.

Note: For pseudo-differential inputs, specify single-ended in software; in this case, how you wire these signals determines the configuration.

Using the Open Layers Control Panel applet, you can also select whether to use 10 k Ω termination resistance between the low side of each differential channel and isolated analog ground. This feature is particularly useful with floating signal sources. Refer to the *KUSB-3116 Getting Started Manual* for more information about wiring to inputs and configuring the driver to use bias return termination resistance.

The KUSB-3116 module can acquire data from a single analog input channel or from a group of analog input channels. Channels are numbered 0 to 31 for single-ended and pseudo-differential inputs, and 0 to 15 for differential inputs.

The following subsections describe how to specify the channels.

Specifying a Single Analog Input Channel

The simplest way to acquire data from a single analog input channel is to specify the channel for a single-value analog input operation using software; refer to [page 17](#) for more information about single-value operations.

You can also specify a single channel using the analog input channel-gain list, described in the next section.

Specifying One or More Analog Input Channels

You can read data from one or more analog input channels using an analog input channel-gain list. You can group the channels in the list sequentially (starting either with 0 or with any other analog input channel) or randomly. You can also specify a single channel or the same channel more than once in the list.

Using software, specify the channels in the order you want to sample them. You can enter up to 1,024 entries in the channel-gain list. The channels are read in order (using continuously paced scan mode or triggered scan mode) from the first entry in the list to the last entry in the list. Refer to [page 17](#) for more information about the supported conversion modes.

You can also use software to set up a channel-inhibit list. This feature is useful if you want to discard acquired values from specific entries in the channel-gain list. Using the channel-inhibit list, you can enable or disable inhibition for each entry in the channel-gain list. If enabled, the value is discarded after the channel is read; if disabled, the value is not discarded after the channel is read.

Notes: If you select an analog input channel as the analog threshold trigger source, the channel used for this trigger source must be the first channel specified in the channel-gain list; refer to [page 22](#) for more information about this trigger source.

The maximum rate at which the module can read the analog input channels depends on the total number of analog input channels and/or counter/timer channels (see [page 11](#)) in the list, and whether or not you are reading the digital input port (see the next section). For example, since the maximum throughput of the analog input subsystem is 500 kSamples/s, the module can read two analog input channels at a rate of 250 kSamples/s each or four analog input channels at a rate of 125 kSamples/s each.

Specifying the Digital Input Port in the Analog Input Channel-Gain List

The KUSB-3116 module allows you to read the digital input port (all 16 digital input lines) using the analog input channel-gain list. This feature is particularly useful when you want to correlate the timing of analog and digital events.

To read the digital input port, specify channel 16 or channel 32 in the analog input channel-gain list. Use channel 16 for modules with 16 single-ended channels or eight differential channels; use channel 32 for modules with 32 single-ended channels or 16 differential channels. You can enter channel 16 or 32 anywhere in the list, and you can enter it more than once, if desired.

The digital input port is treated like any other channel in the analog input channel-gain list; therefore, all the clocking, triggering, and conversion modes supported for analog input channels are supported for the digital input port, if you specify them this way.

Note: The maximum rate at which the module can read the digital input port depends on the total number of analog input channels (see [page 9](#)) and/or counter/timer channels (see the next section) in the channel-gain list. For example, since the maximum throughput of the analog input subsystem is 500 kSamples/s, the module can read one analog input channel and the digital input port (two channels/ports) at a rate of 250 kSamples/s each or three analog input channels and the digital input port (four channels/ports) at a rate of 125 kSamples/s each.

Specifying Counter/Timers in the Analog Input Channel-Gain List

The KUSB-3116 module allows you to read the value of one or more of the five counter/timer channels using the analog input channel-gain list. This feature is particularly useful when you want to correlate the timing of analog and counter/timer events.

To read a counter/timer channel, specify the appropriate channel number in the analog input channel-gain list (refer to [Table 1 on page 12](#)). You can enter a channel number anywhere in the list, and you can enter it more than once, if desired.

You need two channel-gain list entries to read one 32-bit counter value. The first entry stores the lower 16-bit word, and the second entry stores the upper 16-bit word. If you need only the lower 16-bit word, you do not have to include the second entry. The entire 32-bit count value is latched when the lower 16-bit word is stored. This prevents the counter/timer from incrementing between samples.

[Table 1](#) lists the channel number(s) to use for each counter/timer.

Table 1: Using Counter/Timers in Analog Input Channel-Gain List

Counter/Timer Channel	Description	Channel to Specify in Channel-Gain List
C/T_0_LOW	Lower 16 bits (0 to 15) of C/T 0	Channel 17
C/T_0_HI	Upper 16 bits (16 to 31) of C/T 0	Channel 18
C/T_1_LOW	Lower 16 bits (0 to 15) of C/T 1	Channel 19
C/T_1_HI	Upper 16 bits (16 to 31) of C/T 1	Channel 20
C/T_2_LOW	Lower 16 bits (0 to 15) of C/T 2	Channel 21
C/T_2_HI	Upper 16 bits (16 to 31) of C/T 2	Channel 22
C/T_3_LOW	Lower 16 bits (0 to 15) of C/T 3	Channel 23
C/T_3_HI	Upper 16 bits (16 to 31) of C/T 3	Channel 24
C/T_4_LOW	Lower 16 bits (0 to 15) of C/T 4	Channel 25
C/T_4_HI	Upper 16 bits (16 to 31) of C/T 4	Channel 26

The counter/timer channel is treated like any other channel in the analog input channel-gain list; therefore, all the clocking, triggering, and conversion modes supported for analog input channels are supported for the counter/timers, if you specify them this way.

Note: The maximum rate at which the module can read the counter/timers depends on the total number of counter/timer channels and/or analog input channels (see [page 9](#)) in the list and whether or not you are reading the digital input port (see [page 10](#)). For example, since the maximum throughput of the analog input subsystem is 500 kSamples/s, the module can read one analog input channel and one counter/timer channel (two channels) at a rate of 250 kSamples/s each or three analog input channels and one counter/timer channel (four channels) at a rate of 125 kSamples/s each.

Performing Dynamic Digital Output Operations

Using software, you can enable a synchronous dynamic digital output operation for the analog input subsystem. This feature is particularly useful when you want to synchronize and control external equipment.

One dynamic digital output line is accessible through hardware. This line is set to a value of 0 on power up; a reset does not affect the value of the dynamic digital output line. Note that this line is provided in addition to the other 16 digital output lines; see [page 35](#) for more information about the digital I/O features.

You specify the value (0 or 1) to write from the dynamic digital output line using the analog input channel-gain list. A value of 0 indicates a low-level signal; a value of 1 indicates a high-level signal.

As each entry in the channel-gain list is read, the corresponding value is output to the dynamic digital output line. For example, assume that dynamic digital output operations are enabled; that the channel-gain list contains analog input channels 0, 1, 2, and 3; and that the channel-gain list contains the dynamic digital output values 1, 0, 0, 1. [Figure 2](#) shows this configuration.

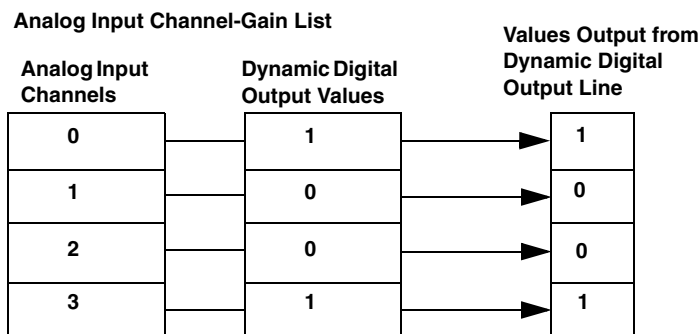


Figure 2: Example Using Dynamic Digital Outputs

As analog input channel 0 is read, a high-level signal is output to the dynamic digital output line. As analog input channels 1 and 2 are read, a low-level signal is output to the dynamic digital output line. As analog input channel 3 is read, a high-level signal is output to the dynamic digital output line.

Input Ranges and Gains

[Table 2](#) lists the supported gains and effective bipolar input ranges for each.

Table 2: Effective Input Range

Gain	Input Range
1	±10 V
2	±5 V
4	±2.5 V
8	±1.25 V

Using software, specify a range of -10 V to $+10\text{ V}$. Note that this is the range for the entire analog input subsystem, not the range per channel.

For each channel, choose the gain that has the smallest effective range that includes the signal you want to measure. For example, if the range of your analog input signal is $\pm 1.05\text{ V}$, specify a range of -10 V to $+10\text{ V}$ for the module and use a gain of 8 for the channel; the effective input range for this channel is then $\pm 1.25\text{ V}$, which provides the best sampling accuracy for that channel.

The way you specify gain depends on how you specified the channels, as described in the following subsections.

Specifying the Gain for a Single Channel

The simplest way to specify gain for a single channel is to specify the gain for a single-value analog input operation using software; refer to [page 17](#) for more information about single-value operations.

You can also specify the gain for a single channel using an analog input channel-gain list, described in the next section.

Specifying the Gain for One or More Channels

You can specify the gain for one or more analog input channels using an analog input channel-gain list. Using software, set up the channel-gain list by specifying the gain for each entry in the list.

For example, assume the analog input channel-gain list contains three entries: channels 5, 6, and 7 and gains 2, 4, and 1. A gain of 2 is applied to channel 5, a gain of 4 is applied to channel 6, and a gain of 1 is applied to channel 7.

Note: For channel 16 or 32 (the digital input port) and channels 17 through 26 or channels 33 through 42 (the counter/timer channels), specify a gain of 1.

Input Sample Clock Sources

The KUSB-3116 module allows you to use one of the following clock sources to pace analog input operations:

- **Internal A/D clock** – Using software, specify the clock source as internal and the clock frequency at which to pace the operation. The minimum frequency supported is 0.75 Samples/s; the maximum frequency supported is 500 kSamples/s.

According to sampling theory (Nyquist Theorem), specify a frequency that is at least twice as fast as the input's highest frequency component. For example, to accurately sample a 20 kHz signal, specify a sampling frequency of at least 40 kHz. Doing so avoids an error condition called *aliasing*, in which high frequency input components erroneously appear as lower frequencies after sampling.

- **External A/D clock** – An external A/D clock is useful when you want to pace acquisitions at rates not available with the internal A/D clock or when you want to pace at uneven intervals.

Connect an external A/D clock to the External ADC Clock input signal on the KUSB-3116 module. Conversions start on the falling edge of the external A/D clock input signal.

Using software, specify the clock source as external. The clock frequency is always equal to the frequency of the external A/D sample clock input signal that you connect to the module.

Note: If you specify channel 16 or 32 (the digital input port) and/or channels 17 through 26 or channels 33 through 42 (the counter/timer channels) in the channel-gain list, the input sample clock (internal or external) also paces the acquisition of the digital input port and/or counter/timer channels.

Analog Input Conversion Modes

The KUSB-3116 module supports the following conversion modes:

- **Single-value operations** are the simplest to use. Using software, you specify the range, gain, and analog input channel. The module acquires the data from the specified channel and returns the data immediately. For a single-value operation, you cannot specify a clock source, trigger source, scan mode, or buffer.

Single-value operations stop automatically when finished; you cannot stop a single-value operation.

- **Scan mode** takes full advantage of the capabilities of the KUSB-3116 module. For a scan, you can specify a channel-gain list, clock source, trigger source, scan mode, buffer, and buffer wrap mode using software. Two scan modes are supported: continuous scan mode and triggered scan mode (often called burst mode). These modes are described in the following subsections.

Using software, you can stop a scan by performing either an orderly stop or an abrupt stop. In an orderly stop, the module finishes acquiring the data, stops all subsequent acquisition, and transfers the acquired data to host memory; any subsequent triggers are ignored.

In an abrupt stop, the module stops acquiring samples immediately; the acquired data is not transferred to host memory, and any subsequent triggers are ignored.

Continuous Scan Mode

Use continuous scan mode if you want to accurately control the period between conversions of individual channels in a scan.

When it detects an initial trigger, the module cycles through the channel-gain list, acquiring and converting the value for each entry in the list (this process is defined as the scan). The module then wraps to the start of the channel-gain list and repeats the process continuously until either the allocated buffers are filled or until you stop the operation. Refer to [page 23](#) for more information about buffers.

The conversion rate is determined by the frequency of the input sample clock; refer to [page 16](#) for more information about the input sample clock. The sample rate, which is the rate at which a single entry in the channel-gain list is sampled, is determined by the frequency of the input sample clock divided by the number of entries in the channel-gain list.

To select continuous scan mode, use software to specify the data flow as continuous and to specify the initial trigger (the trigger source that starts the operation). You can select a software trigger, an external TTL trigger, or an analog threshold trigger as the initial trigger. Refer to [page 22](#) for more information about the supported trigger sources.

[Figure 3](#) illustrates continuous scan mode using a channel-gain list with three entries: channel 0, channel 1, and channel 2. In this example, analog input data is acquired on each clock pulse of the input sample clock. When it reaches the end of the channel-gain list, the module wraps to the beginning of the channel-gain list and repeats this process. Data is acquired continuously.

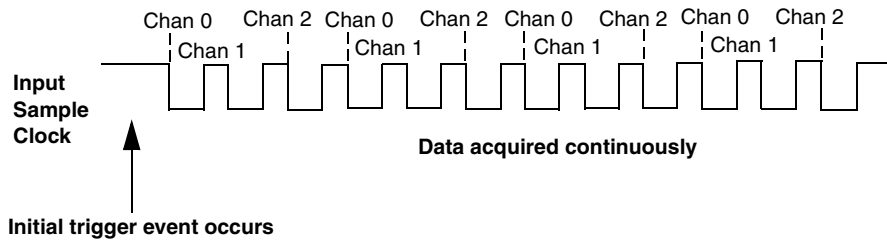


Figure 3: Continuous Scan Mode

Triggered Scan Mode

Use triggered scan mode if you want to accurately control both the period between conversions of individual channels in a scan and the period between each scan. This mode is useful in emulating simultaneous sample-and-hold and trigger-per-buffer operations. You can acquire up to 262,144 samples per trigger (256 times per trigger x 1024-location channel-gain list).

The KUSB-3116 module supports two triggered scan modes: internally retriggered and externally retriggered. These modes are described in the following subsections.

Internally Retriggered Scan Mode

In internally retriggered scan mode, the module waits for the initial trigger to occur. When it detects an initial trigger, the module scans the analog input channel-gain list a specified number of times (up to 256), then waits for an internal retrigger to occur. When it detects an internal retrigger, the module scans the channel-gain list the specified number of times, then waits for another internal retrigger to occur. The process repeats continuously until either the allocated buffers are filled or you stop the operation; refer to [page 23](#) for more information about buffers.

The sample rate is determined by the frequency of the input sample clock divided by the number of entries in the channel-gain list; refer to [page 16](#) for more information about the input sample clock. The conversion rate of each scan is determined by the frequency of the internal retrigger clock. The minimum frequency supported is 0.75 Samples/s; the maximum frequency supported is 500 kSamples/s.

Specify the retrigger frequency as follows:

$$\text{Min. Retrigger Period} = \frac{\text{\# of CGL entries} \times \text{\# of CGLs per trigger} + 2 \mu\text{s}}{\text{A/D sample clock frequency}}$$

$$\text{Max. Retrigger Frequency} = \frac{1}{\text{Min. Retrigger Period}}$$

For example, if you are using 512 channels in the channel-gain list, scanning the channel-gain list 256 times every trigger or retrigger, and using an A/D sample clock with a frequency of 100 kHz, set the maximum retrigger frequency to 0.762 Hz, since

$$0.762 \text{ Hz} = \frac{1}{\frac{(512 * 256) + 2 \mu\text{s}}{100 \text{ kHz}}}$$

To select internally retriggered scan mode, use software to specify the following parameters:

- The dataflow as continuous,
- Triggered scan mode usage as enabled,
- The initial trigger (the trigger source that starts the acquisition),
- The retrigger mode as internal,
- The number of times to scan per trigger or retrigger (also called the multiscan count), and
- The frequency of the retrigger clock.

Externally Retriggered Scan Mode

In externally retriggered scan mode, the module waits for the initial trigger to occur. When it detects an initial trigger, the module scans the channel-gain list up to 256 times, then waits for an external retrigger to occur.

When the retrigger occurs, the module scans the channel-gain list the specified number of times, then waits for another external digital (TTL) trigger to occur. The process repeats continuously until either the allocated buffers are filled or you stop the operation; refer to [page 23](#) for more information about buffers.

The conversion rate of each channel is determined by the frequency of the input sample clock; refer to [page 16](#) for more information about the input sample clock. The conversion rate of each scan is determined by the period between external retriggers; therefore, it cannot be accurately controlled. The module ignores external triggers that occur while it is acquiring data. Only external retrigger events that occur when the module is waiting for a retrigger are detected and acted on.

To select externally retriggered scan mode, use software to specify the following parameters:

- The dataflow as continuous,
- Triggered scan mode as enabled,
- The initial trigger (the trigger source that starts the operation) as any of the supported trigger sources,
- The retrigger mode as an external retrigger (retrigger extra),
- The number of times to scan per trigger or retrigger (also called the multiscan count), and
- The retrigger source as the external digital (TTL) trigger.

Note: If you want to use the external digital (TTL) trigger source as both the initial trigger and the retrigger source, specify the retrigger mode as scan-per-trigger. In this case, you do not have to specify the retrigger source.

Input Triggers

A trigger is an event that occurs based on a specified set of conditions. Acquisition starts when the module detects the initial trigger event and stops when the specified number of samples has been acquired (if the buffer wrap mode is none, described on [page 24](#)), or when you stop the operation. Note that when you stop the operation, the module completes the reading of the channel-gain list.

If you are using triggered scan mode, the module continues to acquire data using the specified retrigger source to clock the operation. Refer to [page 19](#) for more information about triggered scan mode.

The KUSB-3116 module supports the following trigger sources:

- **Software trigger** –A software trigger event occurs when you start the analog input operation (the computer issues a write to the module to begin conversions). Using software, specify the trigger source as a software trigger.
- **External digital (TTL) trigger** –An external digital (TTL) trigger event occurs when the KUSB-3116 module detects a transition (high-to-low or low-to-high) on the External ADC Trigger input signal connected to the module. Using software, specify the trigger source as a rising-edge external digital trigger (external) or a falling-edge external digital trigger (extra).
- **Analog threshold trigger** – An analog threshold trigger event occurs when the signal on the first channel in the analog input channel-gain list rises above (low-to-high transition) a programmable threshold level. Using software, specify the trigger source as a positive threshold trigger (threspos).

You can use any one of the 16 analog input channels as the analog trigger. The analog trigger channel must be the first entry in the analog input channel-gain list.

You specify the threshold level in the `olDaPutSingleValue` function, using D/A subsystem 1. Specify a value between 0 and 255, where 0 equals 0 V and 255 equals +10 V.

Note that you can also use the analog threshold trigger to trigger analog output and digital output operations.

Data Format and Transfer

The KUSB-3116 module uses offset binary data encoding: 0000 to represent negative full-scale and FFFFh to represent positive full-scale. Use software to specify the data encoding as binary.

The ADC outputs FFFFh for above-range signals and 0000 for below-range signals.

Before you begin acquiring data, you must allocate buffers to hold the data. A Buffer Done message is returned whenever a buffer is filled. This allows you to move and/or process the data as needed.

Note: It is recommended that you allocate buffers of 1024 samples or more to optimize the performance of your KUSB-3116 module. If you allocate smaller buffers, the software automatically adjusts the buffer size to 256 samples/buffer, 512 samples/buffer, or 768 samples/buffer, whichever is closest. The rate at which Buffer Done messages are returned depends on the buffer size.

It is recommended that you allocate a minimum of three buffers for analog input operations, specifying one of the following buffer wrap modes in software:

- **None** –Data is written to multiple allocated input buffers continuously; when no more empty buffers are available, the operation stops. If wrap mode is none, the module guarantees gap-free data; however, the data read may not be what you expect.
- **Multiple** –Data is written to multiple allocated input buffers continuously; when no more empty buffers are available, the module overwrites the data in the filled buffers, starting with the first location of the first buffer. This process continues indefinitely until you stop it. If wrap mode is multiple, the module does not guarantee gap-free data.
- **Single** –Data is written to a single input buffer continuously; when the buffer is filled, the module overwrites the data in the buffer starting with the first location of the buffer. This process continues indefinitely until you stop it. Typically, single wrap mode is not used for analog input operations.

Error Conditions

The KUSB-3116 module can report an error if one of the following conditions occurs:

- **A/D Over Sample** – The A/D sample clock rate is too fast. This error is reported if a new A/D sample clock pulse occurs while the ADC is busy performing a conversion from the previous A/D sample clock pulse. The host computer can clear this error. To avoid this error, use a slower sampling rate.
- **Input FIFO Overflow** – The analog input data is not being transferred fast enough to the host computer. The host computer can clear this error, but the error will continue to be generated if the Input FIFO is still full. To avoid this error, close other applications that may be running while you are acquiring data. If this has no effect, try using a computer with a faster processor or reduce the sampling rate.

If one of these error conditions occurs, the module stops acquiring and transferring data to the host computer.

Analog Output Features

This section describes the following features of analog output operations:

- Output resolution, described on this page;
- Analog output channels, described on [page 26](#);
- Output ranges and gains, described on [page 28](#);
- Output triggers, described on [page 28](#),
- Output clocks, described on [page 29](#),
- Data format and transfer, described on [page 33](#); and
- Error conditions, described on [page 34](#).

Output Resolution

The KUSB-3116 module support a fixed resolution of 16-bits for analog output operations. You cannot specify the resolution in software.

Analog Output Channels

The KUSB-3116 module supports four DC-level analog output channels (DAC0, DAC1, DAC2, and DAC3). Refer to the *KUSB-3116 Getting Started Manual* for information about how to wire analog output signals to the module.

The DACs are deglitched to prevent noise from interfering with the output signal. They power up to a value of $0\text{ V} \pm 10\text{ mV}$. Unplugging the module resets the DACs to 0 V .

The KUSB-3116 module can output data from a single DAC or sequentially from one or more DACs and/or the digital output port. The following subsections describe how to specify the channels.

Specifying a Single Analog Output Channel

The simplest way to output data from a single DAC is to specify the channel for a single-value analog output operation using software; refer to [page 30](#) for more information about single-value operations.

You can also specify a single DAC using the output channel list, described in the next section.

Specifying Multiple Analog Output Channels and/or the Digital Output Port

You can output data from one or more DACs and/or the digital output port using the output channel list. This feature is particularly useful when you want to correlate the timing of analog and digital output events.

Using software, specify the data flow mode as continuous for the D/A subsystem (described on [page 30](#)) and specify the output channels you want to update, where 0 is DAC0, 1 is DAC1, 2 is DAC2, 3 is DAC3, and 4 is the digital output port. You can enter a maximum of 5 entries in the output channel list and the channels must be in order. Note that you can skip a channel in the list, however, if you do not want to update it. For example, if you want to update only DAC3 and the digital output port, specify channels 3 and 4 in the output channel list. If you want to update all the DACs and the digital output port, specify channels 0, 1, 2, 3, and 4 in the output channel list. The channels are output in order from the first entry in the list to the last entry in the list.

The amount of data that you can output for each channel depends on how many channels are in the output channel list. For example, if only one channel is entered in the output channel list, you can output up to 128K values; if all five channels are entered in the output channel list, you can output up to 24K values per channel.

Notes: The maximum rate at which the module can update the output channels depends on the total number of channels in the output channel list. Since the maximum throughput for each output channel is 500 kSamples/s, the module can update two output channels at a rate of 1000 kSamples/s or all five output channels at a rate of 2.5 MSamples/s.

The digital output port is treated like any other channel in the output channel list; therefore, all the clocking, triggering, and conversion modes supported for analog output channels are supported for the digital output port, if you specify the digital output port in the output channel list.

Output Ranges and Gains

Each DAC on the KUSB-3116 module can output bipolar analog output signals in the range of ± 10 V.

Through software, specify the range for the entire analog output subsystem as -10 V to +10 V, and the gain for each DAC as 1.

Output Triggers

A trigger is an event that occurs based on a specified set of conditions. The KUSB-3116 module supports the following output trigger sources:

- **Software trigger** – A software trigger event occurs when you start the analog output operation. Using software, specify the trigger source as a software trigger.

- **External digital (TTL) trigger** – An external digital (TTL) trigger event occurs when the KUSB-3116 module detects a transition (high-to-low or low-to-high) on the External DAC Trigger input signal connected to the module. Using software, specify the trigger source as external and the polarity as high-to-low transition or low-to-high transition.
- **Analog threshold trigger** – An analog threshold trigger event occurs when the signal on the first channel in the analog input channel-gain list rises above (low-to-high transition) a programmable threshold level. Using software, specify the trigger source as a positive threshold trigger (threshpos).

You can use any one of the 16 analog input channels as the analog trigger. The analog trigger channel must be the first entry in the analog input channel-gain list.

You specify the threshold level in the **olDaPutSingleValue** function, using D/A subsystem 1. Specify a value between 0 and 255, where 0 equals 0 V and 255 equals +10 V.

Note that you can also use the analog threshold trigger to trigger analog input operations.

Output Clocks

The KUSB-3116 module allows you to use one of the following clock sources to pace analog output and digital output operations:

- **Internal DAC clock** – Using software, specify the clock source as internal and the clock frequency at which to pace the operation. The minimum frequency supported is 0.75 Samples/s; the maximum frequency supported is 500 kSamples/s.

- **External DAC clock** – An external DAC clock is useful when you want to pace conversions at rates not available with the output sample clock or when you want to pace at uneven intervals.

Connect an external DAC clock to the External DAC Clock input signal on the KUSB-3116 module. Analog output and digital output operations start on the rising edge of the external DAC clock output signal.

Using software, specify the clock source as external. The clock frequency is always equal to the frequency of the external DAC clock output signal that you connect to the module.

Output Conversion Modes

The KUSB-3116 modules supports the following conversion modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. Use software to specify the analog output channel, and the value to output from that channel. For a single-value operation, you cannot specify a clock source, trigger source, or buffer. Single-value operations stop automatically when finished; you cannot stop a single-value operation.
- **Continuous analog output operations** take full advantage of the capabilities of the KUSB-3116 module. In this mode, you can specify an output channel list, clock source, trigger source, buffer, and buffer wrap mode. Two continuous analog output modes are supported: continuously paced and waveform generation mode. These modes are described in the following subsections.

Note that each channel in the output channel list must write the same number of values, use the same output clock (refer to [page 29](#)), and use the same output trigger (refer to [page 28](#)).

Continuously Paced Analog Output

Use continuously paced analog output mode if you want to accurately control the period between conversions of individual channels in the output channel list.

Use software to fill the output buffer with the values that you want to write to the DACs and to the digital output port, if applicable. For example, if your output channel list contains only DAC0 and the digital output port, specify the values in the output buffer as follows: the first output value for DAC0, the first output value for the digital output port, the second output value for DAC0, the second output value for the digital output port, and so on.

When it detects a trigger, the module starts writing output values to the DACs/ports, as determined by the output channel list. The operation repeats continuously until either all the data is output from the buffers (if buffer wrap mode is none) or you stop the operation (if buffer wrap mode is multiple). Refer to [page 33](#) for more information about buffer modes.

Make sure that the host computer transfers data to the output channel list fast enough so that the list does not empty completely; otherwise, an underrun error results.

To select continuously paced analog output mode, use software to specify the data flow as continuous, the buffer wrap mode as multiple or none, and the trigger source as any of the supported trigger sources. Refer to [page 28](#) for more information about the supported trigger sources.

To stop a continuously paced analog output operation, you can stop sending data to the module, letting the module stop when it runs out of data, or you can perform either an orderly stop or an abrupt stop using software. In an orderly stop, the module finishes outputting the specified number of samples, then stops; all subsequent triggers are ignored. In an abrupt stop, the module stops outputting samples immediately; all subsequent triggers are ignored.

Waveform Generation

Use waveform generation mode if you want to output a waveform repetitively.

The waveform pattern can range from 2 to 120K (122,880) samples if you specify one output channel, 2 to 60K (61,440) samples for two output channels, 2 to 40K (40,960) samples for three output channels, 2 to 30K (30,720) samples for four output channels, or 2 to 24K (24,576) samples for five output channels.

Note: The waveform pattern size must be the same for all output channels, and the total number of samples must be a multiple of the total number of output channels.

Use software to fill the output buffer with the values that you want to write to the channels in the output channel list. For example, if your output channel list contains only DAC0 and the digital output port, specify the values in the output buffer as follows: the first output value for DAC0, the first output value for the digital output port, the second output value for DAC0, the second output value for the digital output port, and so on.

When it detects a trigger, the host computer transfers the entire waveform pattern to the module, and the module starts writing output values to the DACs/ports, as determined by the output channel list. Use software to allocate the memory and specify the waveform pattern.

To select waveform generation mode, use software to specify the data flow as continuous, the buffer wrap mode as single (refer to [page 34](#)), and the trigger source as any of the supported trigger sources (refer to [page 28](#)).

Data Format and Transfer

Data from the host computer must use offset binary data encoding for analog output signals: 0000 to represent -10 V and FFFFh to represent +10 V. Using software, specify the data encoding as binary.

Before you begin writing data to the DACs/digital output port, you must allocate and fill buffers with the appropriate data. A Buffer Done message is returned whenever a buffer is output. This allows you to output additional data as needed.

Note: It is recommended that you allocate buffers of 1024 samples or more to optimize the performance of your KUSB-3116 module. If you allocate smaller buffers, the software automatically adjusts the buffer size to 256 samples/buffer, 512 samples/buffer, or 768 samples/buffer, whichever is closest. The rate at which Buffer Done messages are returned depends on the buffer size.

Specify one of the following buffer wrap modes in software:

- **None** –Data is written from multiple output buffers continuously; when no more buffers of data are available, the operation stops. If wrap mode is none, the module guarantees gap-free data; however, the data written may not be what you expect.
- **Multiple** –Data is written from multiple output buffers continuously; when no more buffers of data are available, the module returns to the first location of the first buffer and continues writing data. This process continues indefinitely until you stop it. If wrap mode is multiple, the module does not guarantee gap-free data.

- **Single** –Data is written from a single output buffer continuously; when all the data in the buffer is written, the module returns to the first location of the buffer and continues writing data. This process continues indefinitely until you stop it.

If wrap mode is single and the data in the output channel list fits into the allocated output buffer, the data is written once to the module. The module recycles the data, allowing you to output the same pattern continuously without having to reload the data from the output channel list.

Error Conditions

The KUSB-3116 module can report an error if one of the following conditions occurs:

- **Output FIFO Underflow** – The output channel list data is not being sent from the host fast enough. This error is reported if an output sample clock pulse occurs while the output channel list is empty. Note that if no new data is available to be output by either the DACs or the digital output port, the last value placed in the output channel list continues to be output by the DACs/port. You can ignore this error when performing a single-value operation.
- **DAC Over Sample error** –The output sample clock rate is too fast. This error is reported if a new output sample clock occurs while the module is busy loading the next values from the output channel list into the DACs and/or digital output port. To avoid this error, try slowing down the D/A clock, using a different wrap mode, increasing the buffer sizes, or using more buffers.

Digital I/O Features

This section describes the following features of digital I/O operations:

- Digital I/O lines, described on this page; and
- Operation modes, described on [page 36](#).

Digital I/O Lines

The KUSB-3116 module supports one digital input port, consisting of 16 digital input lines (lines 0 to 15) and one digital output port, consisting of 16 digital output lines (lines 0 to 15).

You can specify the digital I/O line that you want to read or write in a single-value digital I/O operation. Refer to [page 36](#) for more information about single-value operations.

In addition, you can specify the entire digital input port in an analog input channel-gain list to perform a continuous digital input operation, or you can specify the entire digital output port in an output channel list to perform a continuous digital output operation. Refer to [page 36](#) for more information about continuous digital I/O operations.

A digital line is high if its value is 1; a digital line is low if its value is 0. On power up or reset, a low value (0) is output from each of the digital output lines.

The KUSB-3116 module allows you to program the first eight digital input lines to perform interrupt-on-change operations. Refer to [page 36](#) for more information.

The KUSB-3116 module provides a dynamic digital output line that you can update whenever an analog input channel is read. The dynamic digital output line is in addition to the 16 digital output lines. Refer to [page 37](#) for more information.

Operation Modes

The KUSB-3116 module supports the following digital I/O operation modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. You use software to specify the digital I/O port and a gain of 1 (the gain is ignored). Data is then read from or written to all the digital I/O lines. For a single-value operation, you cannot specify a clock or trigger source.

Single-value operations stop automatically when finished; you cannot stop a single-value operation.

- **Continuous digital I/O** takes full advantage of the capabilities of the KUSB-3116 module. You can specify a clock source, scan mode, trigger source, buffer, and buffer wrap mode for the operation.
 - **Digital input** – For digital input operations, enter the digital input port (all 16 digital input lines) as channel 16 in the analog input channel-gain list; refer to [page 10](#) for more information. The input sample clock (internal or external) paces the reading of the digital input port (as well as the acquisition of the analog input and counter/timer channels); refer to [page 16](#) for more information.
 - **Digital output** – For digital output operations, enter the digital output port (all 16 digital output lines) as channel 4 in the output channel list; refer to [page 27](#) for more information. The output clock (internal or external) paces the update of the digital output port (as well as the update of the analog output channels); refer to [page 29](#) for more information.
- **Interrupt-on-change operations** – You can use the Open Layers Control Panel applet to select any of the first eight digital input lines to perform interrupt-on-change operations. When any one of the specified bits changes state, the module reads the entire 16-bit digital input value and generates an interrupt.

- **Dynamic digital output** is useful for synchronizing and controlling external equipment and allows you to output data to the dynamic digital output line each time an analog input value is acquired. This mode is programmed through the analog input subsystem; refer to [page 13](#) for more information.

Counter/Timer Features

This section describes the following features of counter/timer (C/T) operations:

- C/T channels, described on this page;
- C/T clock sources, described on [page 39](#);
- Gate types, described on [page 40](#);
- Pulse types and duty cycles, described on [page 41](#); and
- C/T operation modes, described on [page 42](#).

C/T Channels

The KUSB-3116 module provides five 32-bit counter/timers. The counters are numbered 0, 1, 2, 3, and 4. Each counter accepts a clock input signal and gate input signal and outputs a pulse (pulse output signal), as shown in [Figure 4](#).

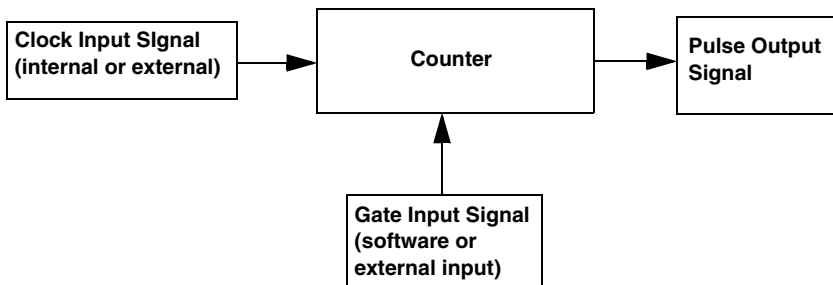


Figure 4: Counter/Timer Channel

To specify the counter/timer to use in software, specify the appropriate C/T subsystem. For example, counter/timer 0 corresponds to C/T subsystem element 0; counter/timer 3 corresponds to C/T subsystem element 3.

Using software, you can also specify one or more of the counter/timers in the analog input channel-gain list. You need two channel-gain list entries to read a 32-bit counter value. The first entry stores the lower 16-bit word, and the second entry stores the upper 16-bit word. If you need only the lower 16-bit word, you do not have to include the second entry. The entire 32-bit count value is latched when the lower 16-bit word is stored. This prevents the counter/timer from incrementing between samples. Refer to [page 11](#) for more information about using C/Ts in the channel-gain list.

C/T Clock Sources

The following clock sources are available for the counter/timers:

- **Internal C/T clock** – The internal C/T clock always uses an 18 MHz time base. Through software, specify the clock source as internal, and specify the clock divider to use to determine the frequency at which to pace the operation (this is the frequency of the Counter *n* Out signal).
- **External C/T clock** – An external C/T clock is useful when you want to pace counter/timer operations at rates not available with the internal C/T clock or if you want to pace at uneven intervals. The frequency of the external C/T clock can range from .004 Hz to 9 MHz.

Connect the external clock to the Counter *n* Clock input signal on the KUSB-3116 module. Counter/timer operations start on the rising edge of the clock input signal.

Using software, specify the clock source as external.

Note: The external C/T clock (the clock connected to the Counter n Clock input signal) determines how often you want to count events, measure frequency, or measure the time interval between edges.

If you specify a counter/timer in the analog input channel-gain list, the external A/D clock (the clock connected to the External ADC Clock input signal) determines how often you want to read the counter value. Refer to [page 16](#) for more information about the external A/D clock.

Gate Types

The edge or level of the Counter n Gate signal determines when a counter/timer operation is enabled. The KUSB-3116 module provides the following gate types:

- **None** –A software command enables any counter/timer operation immediately after execution.
- **Logic-low level external gate input** –Enables a counter/timer operation when the Counter n Gate signal is low, and disables the counter/timer operation when the Counter n Gate signal is high. Note that this gate type is used for event counting and rate generation modes; refer to [page 42](#) for more information about these modes.
- **Logic-high level external gate input** –Enables a counter/timer operation when the Counter n Gate signal is high, and disables a counter/timer operation when the Counter n Gate signal is low. Note that this gate type is used for event counting and rate generation modes; refer to [page 42](#) for more information about these modes.

- **Falling-edge external gate input** –Enables a counter/timer operation when a high-to-low transition is detected on the Counter n Gate signal. In software, this is called a low-edge gate type. Note that this gate type is used for edge-to-edge measurement, one-shot, and repetitive one-shot mode; refer to [page 42](#) for more information about these modes.
- **Rising-edge external gate input** –Enables a counter/timer operation when a low-to-high transition is detected on the Counter n Gate signal. In software, this is called a high-edge gate type. Note that this gate type is used for edge-to-edge measurement, one-shot, and repetitive one-shot mode; refer to [page 42](#) for more information about these modes.

Specify the gate type in software.

Pulse Output Types and Duty Cycles

The KUSB-3116 module can output the following types of pulses from each counter/timer:

- **High-to-low transitions** – The low portion of the total pulse output period is the active portion of the counter/timer clock output signal.
- **Low-to-high transitions** – The high portion of the total pulse output period is the active portion of the counter/timer pulse output signal.

You specify the pulse output type in software.

The duty cycle (or pulse width) indicates the percentage of the total pulse output period that is active. For example, a duty cycle of 50 indicates that half of the total pulse output is low and half of the total pulse output is high. You specify the duty cycle in software.

[Figure 5](#) illustrates a low-to-high pulse with a duty cycle of approximately 30%.

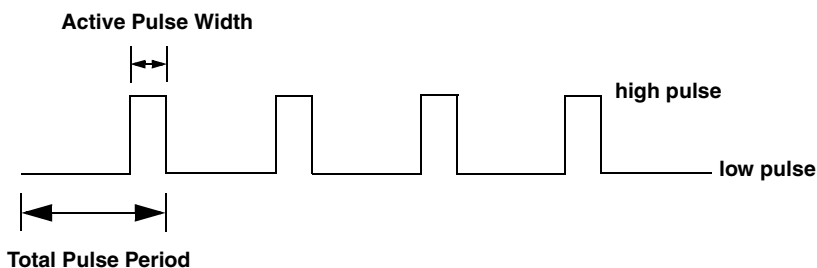


Figure 5: Example of a Low-to-High Pulse Output Type

Counter/Timer Operation Modes

The KUSB-3116 module supports the following counter/timer operation modes:

- Event counting,
- Up/down counting,
- Frequency measurement,
- Edge-to-edge measurement,
- Rate generation,
- One-shot, and
- Repetitive one-shot.

Note: The active polarity for each counter/timer operation mode is software-selectable.

The following subsections describe these modes in more detail.

Event Counting

Use event counting mode if you want to count the number of rising edges that occur on the Counter n Clock input when the Counter n Gate signal is active (low-level or high-level). Refer to [page 40](#) for information about specifying the active gate type.

You can count a maximum of 4,294,967,296 events before the counter rolls over to 0 and starts counting again.

Using software, specify the counter/timer mode as event counting (count), the C/T clock source as external, and the active gate type as low-level or high-level.

Make sure that the signals are wired appropriately. Refer to the *KUSB-3116 Getting Started Manual* for an example of connecting an event counting application.

Up/Down Counting

Use up/down counting mode if you want to increment or decrement the number of rising edges that occur on the Counter n Clock input, depending on the level of the Counter n Gate signal.

If the Counter n Gate signal is high, the C/T increments; if the specified gate signal is low, the C/T decrements.

Using software, specify the counter/timer mode as up/down counting (up/down), and the C/T clock source as external. Note that you do not specify the gate type in software.

Make sure that the signals are wired appropriately. Refer to the *KUSB-3116 Getting Started Manual* for an example of connecting an up/down counting application.

Note: Initialize the counter/timer so that the C/T never increments above FFFFFFFFh or decrements below 0.

Frequency Measurement

Use frequency measurement mode if you want to measure the number of rising edges that occur on the Counter *n* Clock input over a specified duration.

Using software, specify the counter/timer mode as frequency measurement (count) or event counting (count), the clock source as external, and the time over which to measure the frequency.

You can use the Windows timer (which uses a resolution of 1 ms), or if you need more accuracy than the Windows timer provides, you can connect a pulse of a known duration (such as a one-shot output of another user counter) to the Counter *n* Gate input signal.

If you use a known pulse, use software to set up the counter/timers as follows:

1. Set up one of the counter/timers for one-shot mode, specifying the clock source as internal, the clock frequency, the gate type that enables the operation as rising edge or falling edge, the polarity of the output pulse as high-to-low transition or low-to-high transition, the pulse width, and the duty cycle of the output pulse.
2. Set up the counter/timer that will measure the frequency for event counting mode, specifying the type of clock pulses to count and the gate type (this should match the pulse output type of the counter/timer set up for one-shot mode).
3. Start both counters (pulses are not counted until the active period of the one-shot pulse is generated).

4. Read the number of pulses counted. (Allow enough time to ensure that the active period of the one-shot occurred and that events have been counted.)
5. Determine the measurement period using the following equation:

$$\text{Measurement period} = \frac{1}{\text{Clock Frequency}} * \text{Active Pulse Width}$$

6. Determine the frequency of the clock input signal using the following equation:

$$\text{Frequency Measurement} = \frac{\text{Number of Events}}{\text{Measurement Period}}$$

Make sure that the signals are wired appropriately. One way to wire a frequency measurement operation is to use the same wiring as an event counting application, but not use an external gate signal. Refer to the *KUSB-3116 Getting Started Manual* for an example of connecting a frequency measurement application.

Edge-to-Edge Measurement

Use edge-to-edge measurement mode if you want to measure the time interval between a specified start edge and a specified stop edge.

The start edge and the stop edge can occur on the rising edge of the Counter *n* Gate input, the falling edge of the Counter *n* Gate input, the rising edge of the Counter *n* Clock input, or the falling edge of the Counter *n* Clock input. When the start edge is detected, the counter/timer starts incrementing, and continues incrementing until the stop edge is detected. The C/T then stops incrementing until it is enabled to start another measurement.

You can use edge-to-edge measurement to measure the following:

- Pulse width of a signal pulse (the amount of time that a signal pulse is in a high or a low state, or the amount of time between a rising edge and a falling edge or between a falling edge and a rising edge). You can calculate the pulse width as follows:
 - $\text{Pulse width} = \text{Number of counts} / 18 \text{ MHz}$
- Period of a signal pulse (the time between two occurrences of the same edge - rising edge to rising edge or falling edge to falling edge). You can calculate the period as follows:
 - $\text{Period} = 1 / \text{Frequency}$
 - $\text{Period} = \text{Number of counts} / 18 \text{ MHz}$
- Frequency of a signal pulse (the number of periods per second). You can calculate the frequency as follows:
 - $\text{Frequency} = 18 \text{ MHz} / \text{Number of Counts}$

When the operation is complete, you can read the value of the counter.

Using software, specify the counter/timer mode as edge-to-edge measurement mode (measure), the C/T clock source as internal, the start edge type, and the stop edge type.

Make sure that the signals are wired appropriately. Refer to the *KUSB-3116 Getting Started Manual* for an example of connecting an edge-to-edge measurement application.

Rate Generation

Use rate generation mode to generate a continuous pulse output signal from the Counter *n* Out line; this mode is sometimes referred to as continuous pulse output or pulse train output. You can use this pulse output signal as an external clock to pace other operations, such as analog input, analog output, or other counter/timer operations.

The pulse output operation is enabled whenever the Counter n Gate signal is at the specified level. While the pulse output operation is enabled, the counter outputs a pulse of the specified type and frequency continuously. As soon as the operation is disabled, rate generation stops.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). You can output pulses using a maximum frequency of 9 MHz (this is the frequency of the Counter n Out signal). Refer to [page 39](#) for more information about the C/T clock sources.

Using software, specify the counter/timer mode as rate generation (rate), the C/T clock source as either internal or external, the clock divider (for an internal clock), the polarity of the output pulses (high-to-low transition or low-to-high transition), the duty cycle of the output pulses, and the active gate type (low-level or high-level). Refer to [page 41](#) for more information about pulse output signals and to [page 40](#) for more information about gate types.

Make sure that the signals are wired appropriately. Refer to the *KUSB-3116 Getting Started Manual* for an example of connecting a rate generation application.

One-Shot

Use one-shot mode to generate a single pulse output signal from the Counter n Out line when the specified edge is detected on the Counter n Gate signal. You can use this pulse output signal as an external digital (TTL) trigger to start other operations, such as analog input or analog output operations.

After the single pulse is output, the one-shot operation stops. All subsequent clock input signals and gate input signals are ignored.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). Note that in one-shot mode, the internal C/T clock is more useful than an external C/T clock; refer to [page 39](#) for more information about the C/T clock sources.

Using software, specify the counter/timer mode as one-shot, the clock source as internal (recommended), the clock divider, the polarity of the output pulse (high-to-low transition or low-to-high transition), the duty cycle of the output pulse, and the active gate type (rising edge or falling edge). Refer to [page 41](#) for more information about pulse output types and to [page 40](#) for more information about gate types.

Note: In the case of a one-shot operation, use a duty cycle as close to 100% as possible to output a pulse immediately. Using a duty cycle closer to 0% acts as a pulse output delay.

Make sure that the signals are wired appropriately. Refer to the *KUSB-3116 Getting Started Manual* for an example of connecting a one-shot application.

Repetitive One-Shot

Use repetitive one-shot mode to generate a pulse output signal from the Counter *n* Out line whenever the specified edge is detected on the Counter *n* Gate signal. You can use this mode to clean up a poor clock input signal by changing its pulse width, then outputting it.

The module continues to output pulses until you stop the operation. Note that any Counter *n* Gate signals that occur while the pulse is being output are not detected by the module.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). Note that in repetitive one-shot mode, the internal C/T clock is more useful than an external clock; refer to [page 39](#) for more information about the C/T clock sources.

Using software, specify the counter/timer mode as repetitive one-shot (oneshot-rpt), the polarity of the output pulses (high-to-low transition or low-to-high transition), the duty cycle of the output pulses, the C/T clock source as internal (recommended), the clock divider, and the active gate type (rising edge or falling edge). Refer to [page 41](#) for more information about pulse output types and to [page 40](#) for more information about gates.

Note: In the case of a repetitive one-shot operation, use a duty cycle as close to 100% as possible to output a pulse immediately. Using a duty cycle closer to 0% acts as a pulse output delay.

Make sure that the signals are wired appropriately. Refer to the *KUSB-3116 Getting Started Manual* for an example of connecting a repetitive one-shot application.



Supported Device Driver Capabilities

The *KUSB-3116* Device Driver provides support for the analog input (A/D), analog output (D/A), digital input (DIN), digital output (DOUT), and counter/timer (C/T) subsystems. For information on how to configure the device driver, refer to the *KUSB-3116 Getting Started Manual*.

Table 3 summarizes the features available for use with the DataAcq SDK and the KUSB-3116 module. The DataAcq SDK provides functions that return support information for specified subsystem capabilities at run-time.

The first row in the table lists the subsystem types. The first column in the table lists all possible subsystem capabilities. A description of each capability is followed by the parameter used to describe that capability in the DataAcq SDK.

Note: Blank fields represent unsupported options.

The DataAcq SDK uses the functions **olDaGetSSCaps** (for those queries starting with OLSSC) and **olDaGetSSCapsEx** (for those queries starting with OLSSCE) to return the supported subsystem capabilities for a device.

For more information, refer to the description of these functions in the DataAcq SDK online help. See the *DataAcq User's Manual* for information on launching this help file.

Table 3: KUSB-3116 Supported Options

	KUSB-3116	A/D	D/A	DIN	DOUT	SRL	C/T
	Total Subsystems on Module	1	1	1 ^a	1 ^b	0	5
Data Flow Mode	Single-Value Operation Support OLSSC_SUP_SINGLEVALUE	Yes	Yes	Yes	Yes		
	Continuous Operation Support OLSSC_SUP_CONTINUOUS	Yes	Yes	Yes ^c	Yes ^d		Yes ^e
	Continuous Operation until Trigger Event Support OLSSC_SUP_CONTINUOUS_PRETRIG						
	Continuous Operation before and after Trigger Event OLSSC_SUP_CONTINUOUS_ABOUTTRIG						
	DT-Connect Support OLSSC_SUP_DTCONNECT						
	Continuous DT-Connect Support OLSSC_SUP_DTCONNECT_CONTINUOUS						
	Burst DT-Connect Support OLSSC_SUP_DTCONNECT_BURST						
	Sim. Oper.	Simultaneous Start List Support OLSSC_SUP_SIMULTANEOUS_START	Yes	Yes			
Pause Oper.	Pause Operation Support OLSSC_SUP_PAUSE						
Wind. Mess.	Asynchronous Operation Support OLSSC_SUP_POSTMESSAGE	Yes	Yes	Yes ^f			Yes
Buffering	Buffer Support OLSSC_SUP_BUFFERING	Yes	Yes	Yes ^g	Yes ^h		Yes ⁱ
	Single Buffer Wrap Mode Support OLSSC_SUP_WRPSINGLE	Yes	Yes	Yes	Yes		Yes

Table 3: KUSB-3116 Supported Options (cont.)

	KUSB-3116	A/D	D/A	DIN	DOUT	SRL	C/T
	Total Subsystems on Module	1	1	1^a	1^b	0	5
Buffering (cont.)	Multiple Buffer Wrap Mode Support OLSSC_SUP_WRPMULTIPLE	Yes	Yes				
	Inprocess Buffer Flush Support OLSSC_SUP_INPROCESSFLUSH	Yes ^j					
	Waveform Generation Mode Support OLSSC_SUP_WAVEFORM_MODE		Yes				
DMA	Number of DMA Channels OLSSC_NUMDMACHANS	0	0	0	0		0
	Supports Gap Free Data with No DMA OLSSC_SUP_GAPFREE_NODMA	Yes	Yes				
	Supports Gap Free Data with Single DMA OLSSC_SUP_GAPFREE_SINGLEDMA						
	Supports Gap Free Data with Dual DMA OLSSC_SUP_GAPFREE_DUALDMA						
Triggered Scan Mode	Triggered Scan Support OLSSC_SUP_TRIGSCAN	Yes					
	Maximum Number of CGL Scans per Trigger OLSSC_MAXMULTISCAN	256 ^k	0	0	0		0
	Supports Scan per Trigger Event Triggered Scan OLSSC_SUP_RETRIGGER_SCAN_ PER_TRIGGER	Yes					
	Supports Internal Retriggered Triggered Scan OLSSC_SUP_RETRIGGER_INTERNAL	Yes					
	Extra Retrigger Support OLSSC_SUP_RETRIGGER_EXTRA	Yes					

Table 3: KUSB-3116 Supported Options (cont.)

	KUSB-3116	A/D	D/A	DIN	DOUT	SRL	C/T
	Total Subsystems on Module	1	1	1^a	1^b	0	5
Trig. Scan Mode (cont.)	Maximum Retrigger Frequency OLSSCE_MAXRETRIGGER	250 kHz	250 kHz	0	0		0
	Minimum Retrigger Frequency OLSSCE_MINRETRIGGER	0.75 Hz	0.75 Hz	0	0		0
Channel-Gain List	Maximum Channel-Gain List Depth OLSSC_CGLDEPTH	1024	5	1	1		0
	Sequential Channel-Gain List Support OLSSC_SUP_SEQUENTIAL_CGL	Yes	Yes				
	Zero Start Sequential Channel-Gain List Support OLSSC_SUP_ZEROSEQUENTIAL_CGL	Yes	Yes				
	Random Channel-Gain List Support OLSSC_SUP_RANDOM_CGL	Yes					
	Simultaneous Sample-and-Hold Support OLSSC_SUP_SIMULTANEOUS_SH						
	Channel List Inhibit Support OLSSC_SUP_CHANNELLIST_INHIBIT	Yes					
	Programmable Gain Support OLSSC_SUP_PROGRAMGAIN	Yes					
Gain	Number of Gains OLSSC_NUMGAINS	4	1	1	1		0
	AutoRanging Support OLSSC_SINGLEVALUE_AUTORANGE						
Synchronous Digital I/O	Synchronous Digital I/O Support OLSSC_SUP_SYNCHRONOUS_DIGITALIO	Yes					
	Maximum Synchronous Digital I/O Value OLSSC_MAXDIGITALIOLIST_VALUE	1	65,535	0	0		0

Table 3: KUSB-3116 Supported Options (cont.)

	KUSB-3116	A/D	D/A	DIN	DOUT	SRL	C/T
	Total Subsystems on Module	1	1	1^a	1^b	0	5
I/O Channels	Number of Channels OLSSC_NUMCHANNELS	27 or 42 ^l	4	1	1		0
Channel Type	SE Support OLSSC_SUP_SINGLEENDED	Yes					
	SE Channels OLSSC_MAXSECHANS	16	0	0	0		0
	DI Support OLSSC_SUP_DIFFERENTIAL	Yes	Yes	Yes	Yes		
	DI Channels OLSSC_MAXDICHANS	8	4	1	1		0
Filters	Filter/Channel Support OLSSC_SUP_FILTERPERCHAN						
	Number of Filters OLSSC_NUMFILTERS	1	1	1	1		0
Ranges	Number of Voltage Ranges OLSSC_NUMRANGES	1	1	0	0		0
	Range per Channel Support OLSSC_SUP_RANGEPERCHANNEL						
Resolution	Software Programmable Resolution OLSSC_SUP_SWRESOLUTION						
	Number of Resolutions OLSSC_NUMRESOLUTIONS	1 ^m	1 ^m	1	1		1
Data Encoding	Binary Encoding Support OLSSC_SUP_BINARY	Yes	Yes	Yes	Yes		Yes
	Twos Complement Support OLSSC_SUP_2SCOMP						

Table 3: KUSB-3116 Supported Options (cont.)

	KUSB-3116	A/D	D/A	DIN	DOUT	SRL	C/T
	Total Subsystems on Module	1	1	1^a	1^b	0	5
Triggers	Software Trigger Support OLSSC_SUP_SOFTTRIG	Yes	Yes	Yes	Yes		Yes
	External Trigger Support OLSSC_SUP_EXTERNTRIG	Yes ⁿ	Yes				Yes
	Positive Threshold Trigger Support OLSSC_SUP_THRESHTRIGPOS	Yes	Yes				
	Negative Threshold Trigger Support OLSSC_SUP_THRESHTRIGNEG						
	Analog Event Trigger Support OLSSC_SUP_ANALOGEVENTTRIG						
	Digital Event Trigger Support OLSSC_SUP_DIGITALEVENTTRIG						
	Timer Event Trigger Support OLSSC_SUP_TIMEREVENTTRIG						
	Number of Extra Triggers OLSSC_NUMEXTRATRIGGERS	1	0	0	0		0
	Clocks	Internal Clock Support OLSSC_SUP_INTCLOCK	Yes	Yes	Yes	Yes	
External Clock Support OLSSC_SUP_EXTCLOCK		Yes	Yes				Yes
Simultaneous Input/Output on a Single Clock Signal OLSSC_SUP_SIMULTANEOUS_ CLOCKING		No	Yes				
Number of Extra Clocks OLSSC_NUMEXTRACLOCKS		0	0	0	0		0
Base Clock Frequency OLSSCE_BASECLOCK		18 MHz	18 MHz	0	0		18 MHz
Maximum External Clock Divider OLSSCE_MAXCLOCKDIVIDER		1	1	1	1		2,147, 483,647

Table 3: KUSB-3116 Supported Options (cont.)

	KUSB-3116	A/D	D/A	DIN	DOUT	SRL	C/T
	Total Subsystems on Module	1	1	1 ^a	1 ^b	0	5
Clocks (cont.)	Minimum External Clock Divider OLSSCE_MINCLOCKDIVIDER	1	1	1	1		2
	Maximum Throughput OLSSCE_MAXTHROUGHPUT	500 kHz	500 kHz	0	0		9 MHz
	Minimum Throughput OLSSCE_MINTHROUGHPUT	0.75 Hz	0.75 Hz	0	0		0.004 Hz
	Cascading Support OLSSC_SUP_CASCADING						
Counter/Timers	Event Count Mode Support OLSSC_SUP_CTMODE_COUNT						Yes
	Generate Rate Mode Support OLSSC_SUP_CTMODE_RATE						Yes
	One-Shot Mode Support OLSSC_SUP_CTMODE_ONESHOT						Yes
	Repetitive One-Shot Mode Support OLSSC_SUP_CTMODE_ONESHOT_RPT						Yes
	Up/Down Counting Mode Support OLSSC_SUP_CTMODE_UP_DOWN						Yes
	Edge-to-Edge Measurement Mode Support OLSSC_SUP_CTMODE_MEASURE						Yes
	Continuous Edge-to-Edge Measurement Mode Support OLSSC_SUP_CTMODE_CONT_MEASURE						15 ^o
	High to Low Output Pulse Support OLSSC_SUP_PLS_HIGH2LOW						Yes
	Low to High Output Pulse Support OLSSC_SUP_PLS_LOW2HIGH						Yes

Table 3: KUSB-3116 Supported Options (cont.)

	KUSB-3116	A/D	D/A	DIN	DOUT	SRL	C/T
	Total Subsystems on Module	1	1	1 ^a	1 ^b	0	5
Counter/Timers (cont.)	None (internal) Gate Type Support OLSSC_SUP_GATE_NONE						Yes
	High Level Gate Type Support OLSSC_SUP_GATE_HIGH_LEVEL						Yes ^D
	Low Level Gate Type Support OLSSC_SUP_GATE_LOW_LEVEL						Yes ^D
	High Edge Gate Type Support OLSSC_SUP_GATE_HIGH_EDGE						Yes ^D
	Low Edge Gate Type Support OLSSC_SUP_GATE_LOW_EDGE						Yes ^D
	Level Change Gate Type Support OLSSC_SUP_GATE_LEVEL						
	High Level Gate Type with Input Debounce Support OLSSC_SUP_GATE_HIGH_LEVEL_ DEBOUNCE						
	Low Level Gate Type with Input Debounce Support OLSSC_SUP_GATE_LOW_LEVEL_ DEBOUNCE						
	High Edge Gate Type with Input Debounce Support OLSSC_SUP_GATE_HIGH_EDGE_ DEBOUNCE						
	Low Edge Gate Type with Input Debounce Support OLSSC_SUP_GATE_LOW_EDGE_ DEBOUNCE						
	Level Change Gate Type with Input Debounce Support OLSSC_SUP_GATE_LEVEL_ DEBOUNCE						

Table 3: KUSB-3116 Supported Options (cont.)

	KUSB-3116	A/D	D/A	DIN	DOUT	SRL	C/T
	Total Subsystems on Module	1	1	1^a	1^b	0	5
Interrupt	Interrupt Support OLSSC_SUP_INTERRUPT			Yes			Yes
FIFOs	FIFO in Data Path Support OLSSC_SUP_FIFO						
	Output FIFO Size OLSSC_FIFO_SIZE_IN_K		128 ^d				
Processor	Data Processing Capability OLSSC_SUP_PROCESSOR	Yes	Yes	Yes	Yes		Yes
Software Calibration	Software Calibration Support OLSSC_SUP_SWCAL	Yes ^f	Yes ^f				

- a. The DIN subsystem contains 16 digital input lines.
- b. The DOUT subsystem contains 16 digital output lines.
- c. The DIN subsystem supports continuous mode by allowing you to read the digital input port (all 16 digital input lines) using the analog input channel-gain list.
- d. The DOUT subsystem supports continuous mode by allowing you to output data from the digital output port (all 16 digital output lines) using the output channel list.
- e. The C/T subsystem supports continuous mode by allowing you to read the value of one or more of the five counter/timer channels using the analog input channel-gain list.
- f. The DIN subsystem supports the posting of messages only if the digital input port is configured for continuous mode and if you used the Open Layers Control Panel applet to select any of the first eight digital input lines to perform interrupt-on-change operations. The device driver posts the `OLDA_WM_EVENTDONE_WITH_DATA` message when a bit changes state. The 16-bit value of the digital input port is also returned.
- g. The DIN subsystem supports buffering by allowing you to read the digital input port (all 16 digital input lines) using the analog input channel-gain list.
- h. The DOUT subsystem supports buffering by allowing you to output data from the digital output port (all 16 digital output lines) using the output channel list.
- i. The C/T subsystem supports buffering by allowing you to read the value of one or more of the five counter/timer channels using the analog input channel-gain list.
- j. The data from the KUSB-3116 module is transferred to the host in 4,096-byte (2,048-sample) segments. If the application calls `olDaFlushFromBufferInProgress` before the module has transferred 2,048 samples to the host, the buffer on the done queue will contain 0 samples. Your application program must deal with these situations when flushing an inprocess buffer.

- k. The channel-gain list depth of 1024 entries in conjunction with a multiscan of 256 provides an effective channel-gain list depth of up to 256K entries.
- l. Channels 0 to 15 read the analog input channels; channel 16 reads all 16 bits from the DIN subsystem; channels 17 to 26 read the C/T channels.
- m. The resolution of the KUSB-3116 module is 16 bits.
- n. OL_TRG_EXTERN is the rising-edge external digital (TTL) trigger input; OL_TRG_EXTRA is the falling-edge digital external (TTL) trigger input; OL_TRG_THRESHPOS is the positive-edge analog threshold trigger from an analog input channel.
- o. Edge-to-edge measurement mode is supported on both the gate and clock signals; rising and falling edges are both supported.
- p. High-edge and low-edge are supported for one-shot and repetitive one-shot modes. High-level and low-level are supported for event counting, up/down counting, frequency measurement, edge-to-edge measurement, and rate generation modes.
- q. At the present time, this query is supported for the KUSB-3116 module only. For this module, the output FIFO size is always 128 K.
- r. The KUSB-3116 module is calibrated at the factory and should not require recalibration.




Programming Flowcharts

Single-Value Operations	65
Continuous A/D Operations	67
Continuous D/A Operations	69
Continuous Digital Input Operations	71
Continuous Digital Output Operations	72
Event Counting Operations	73
Up/Down Counting Operations	75
Frequency Measurement Operations	77
Edge-to-Edge Measurement Operations	79
Pulse Output Operations.....	81
Simultaneous Operations	83

The following flowcharts show the steps required to perform data acquisition operations using DT-Open Layers. For illustration purposes, the DataAcq SDK functions are shown; however, the concepts apply to all DT-Open Layers software.


Note that many steps represent several substeps; if you are unfamiliar with the detailed operations involved with any one step, refer to the indicated page for detailed information. Optional steps appear in shaded boxes.

Single-Value Operations

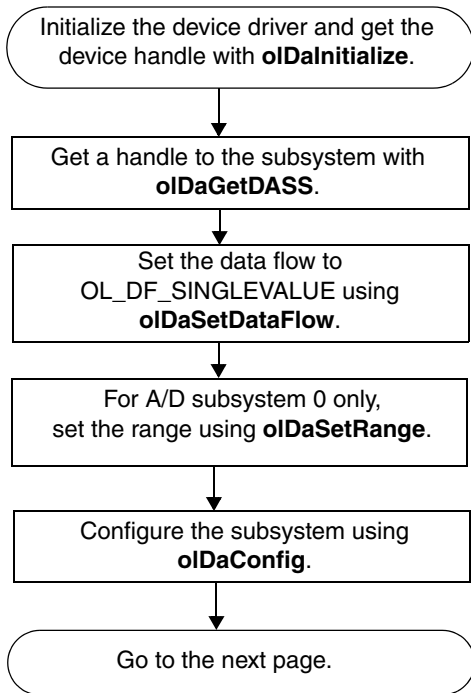


Specify A/D subsystem 0 for an analog input operation, D/A subsystem 0 for an analog output operation, DIN subsystem 0 for a digital input operation, or DOUT subsystem 0 for a digital output operation.


Single-Value Operations (cont.)

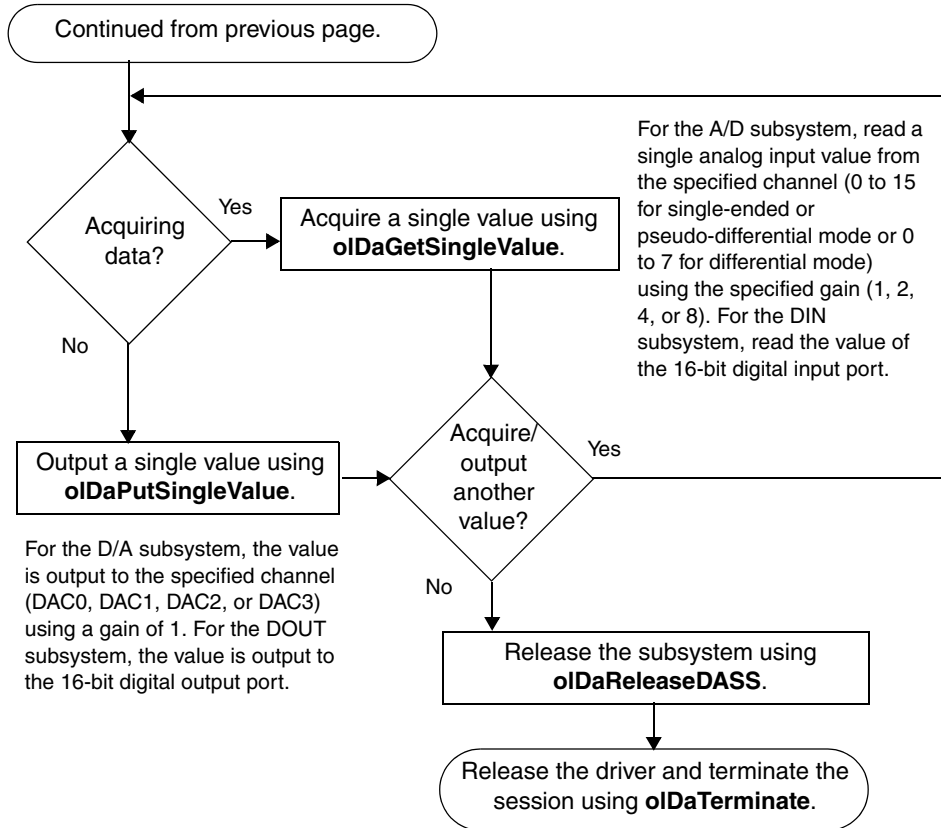

Continuous A/D Operations

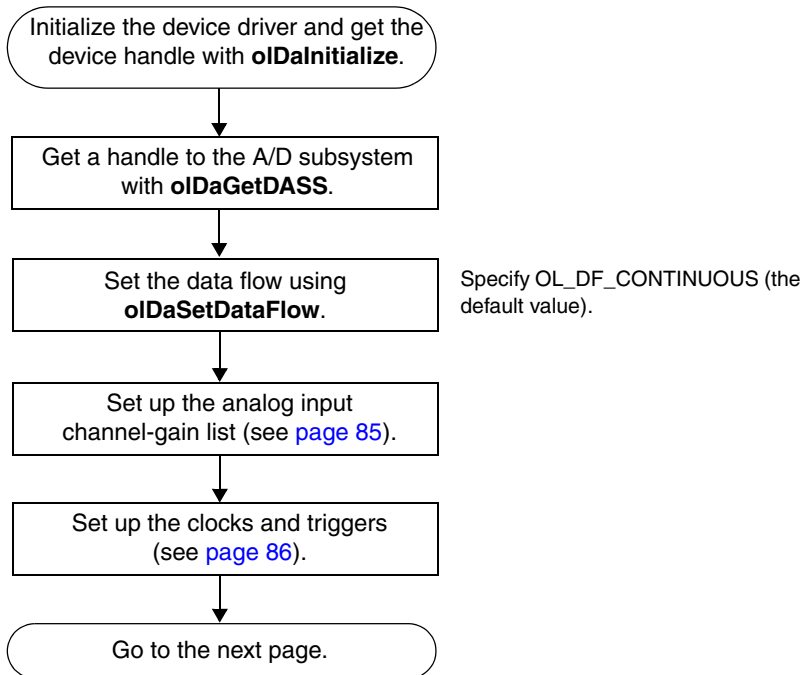


Continuous A/D Operations (cont.)

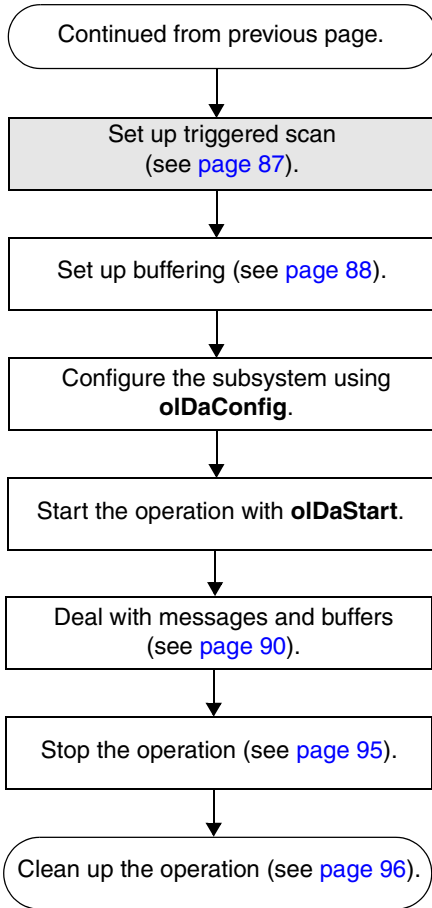


After you configure the subsystem, you can use **oIDaGetClockFrequency** to return the actual frequency of the internal clock; you can use **oIDaGetRetriggerFrequency** to return the actual frequency of the internal retrigger clock.


Continuous D/A Operations

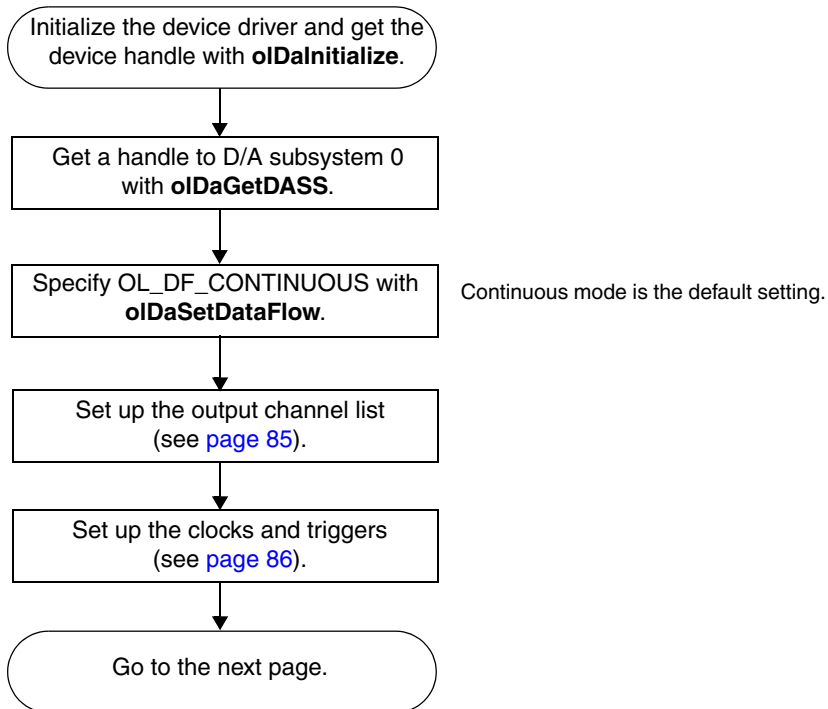


Continuous D/A Operations (cont.)

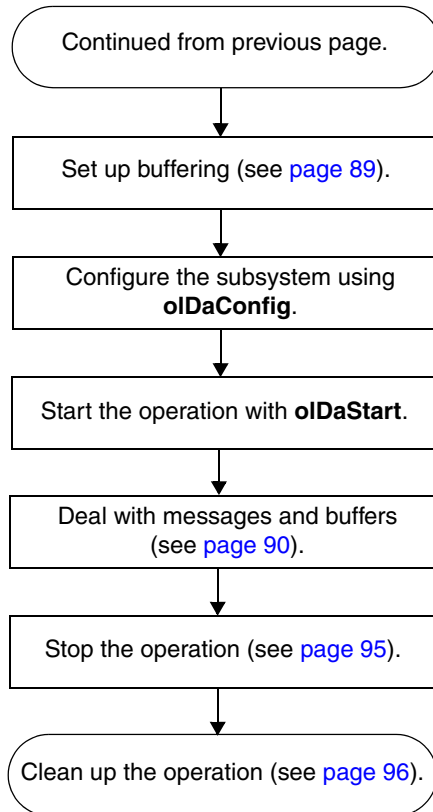


Continuous Digital Input Operations

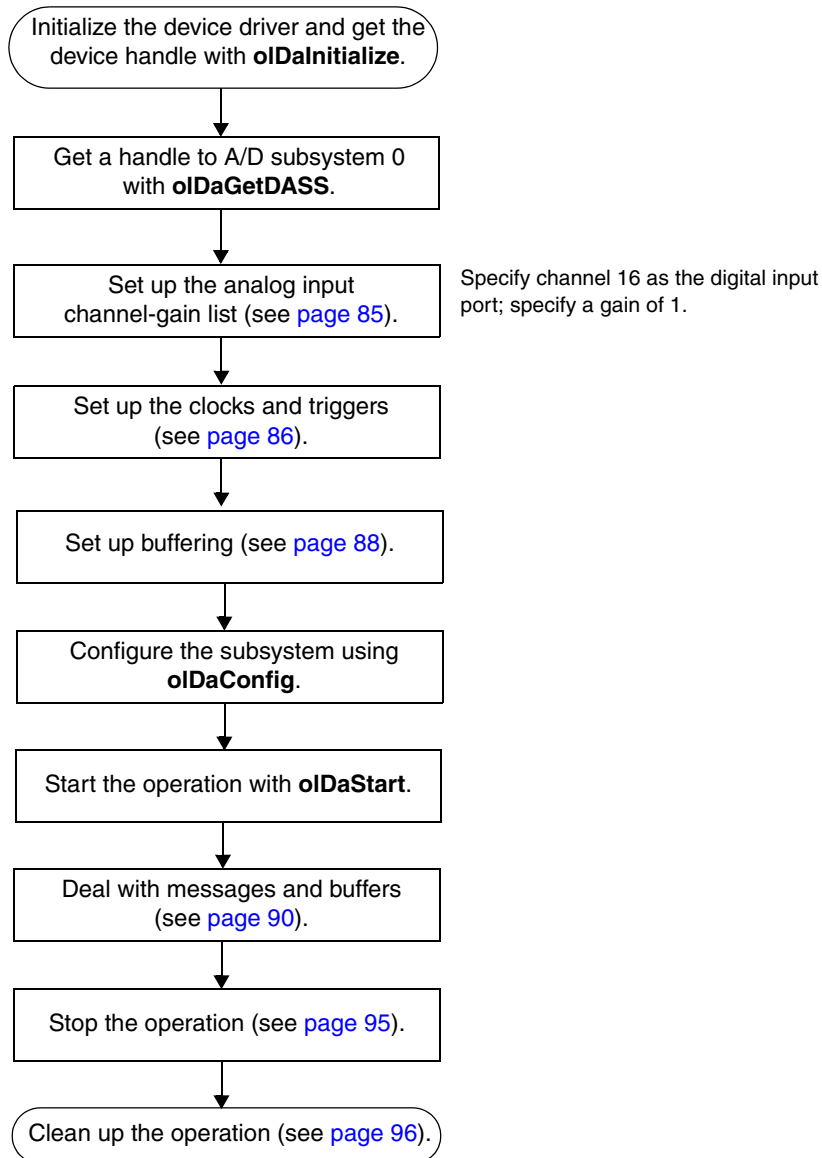


Continuous Digital Output Operations

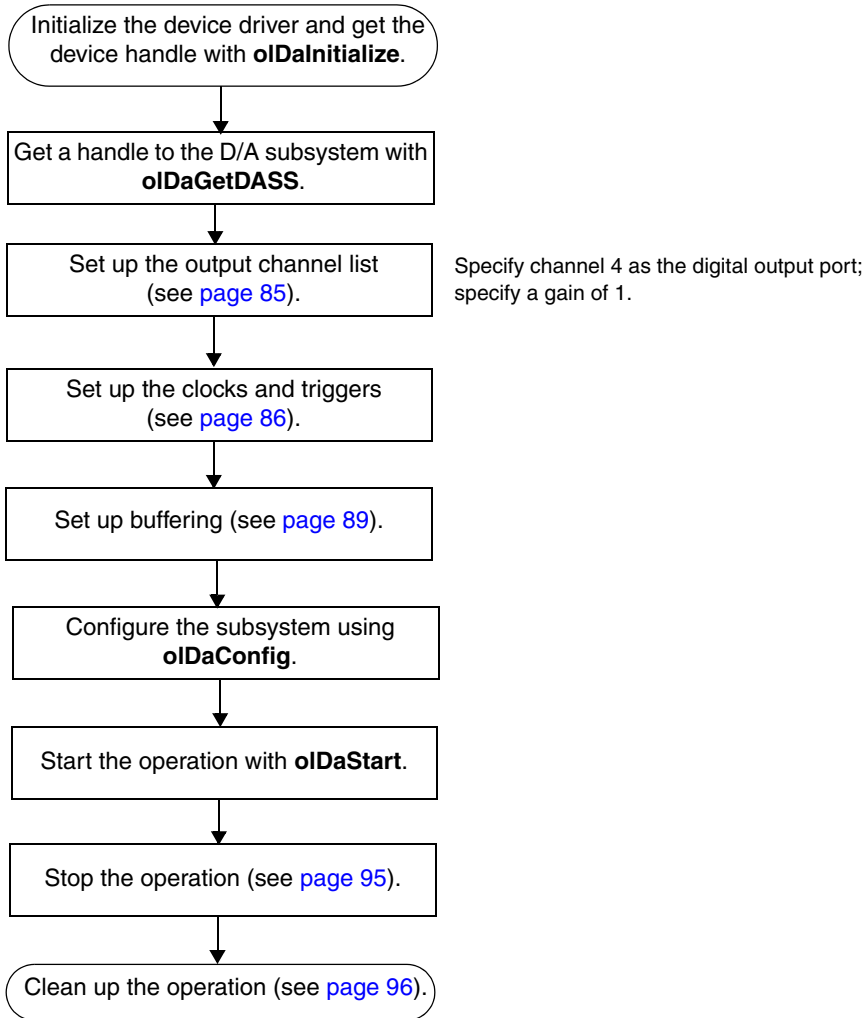


Event Counting Operations

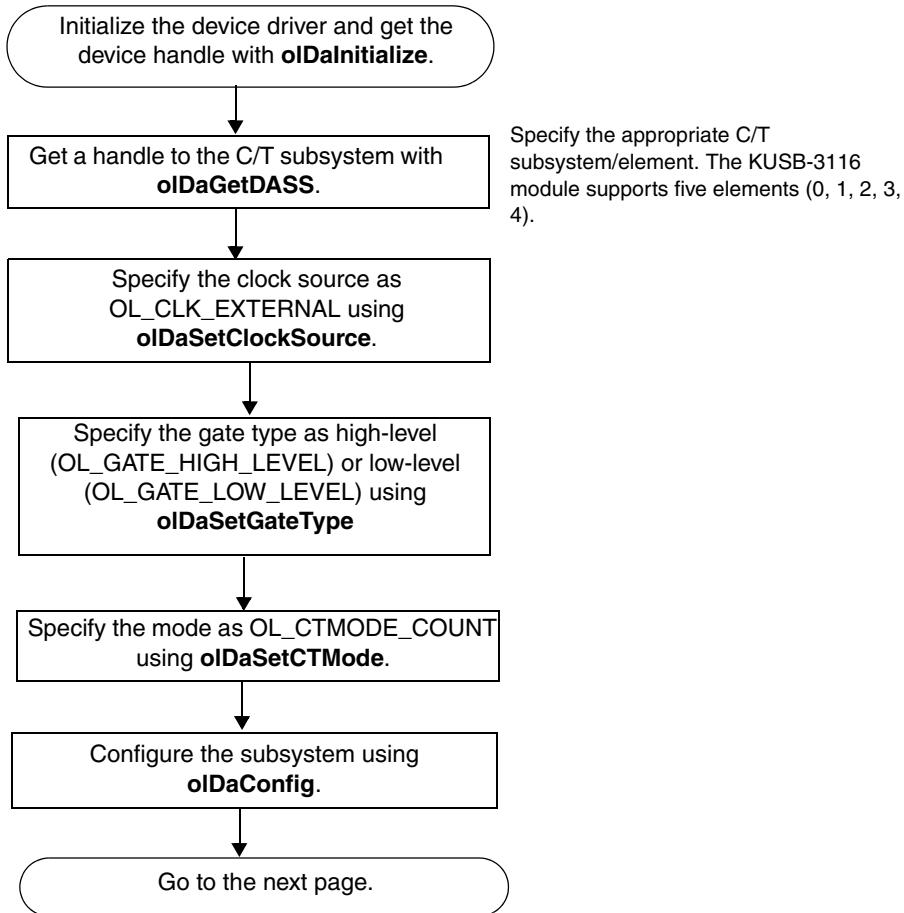


Event Counting Operations (cont.)

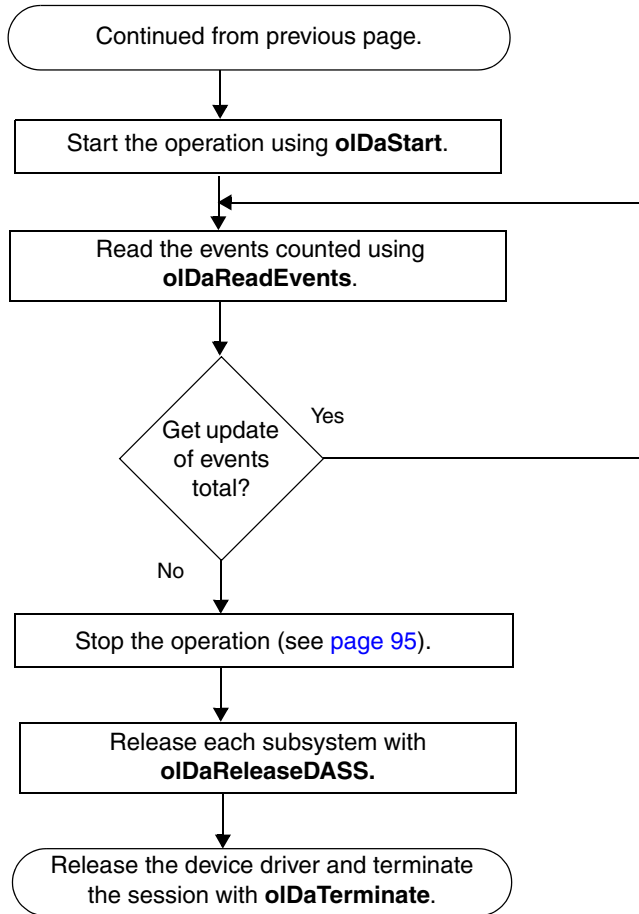

Up/Down Counting Operations

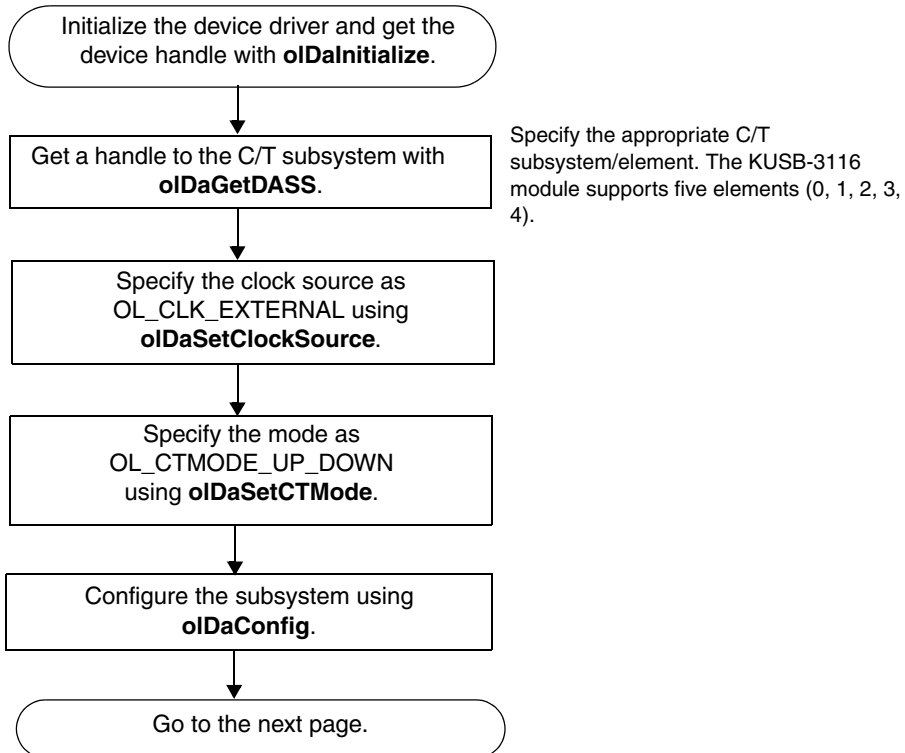


Up/Down Counting Operations (cont.)

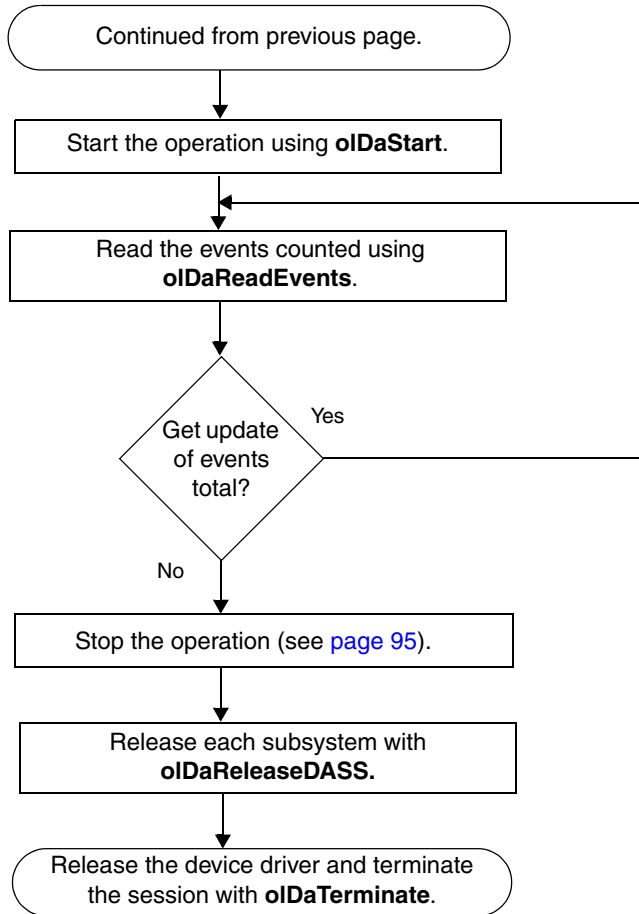


Frequency Measurement Operations

The following flowchart shows the steps required to perform a frequency measurement operation using the Windows timer. If you need more accuracy the Windows timer provides, refer to [page 44](#) of this manual or to your *DataAcq SDK User's Manual* for more information.

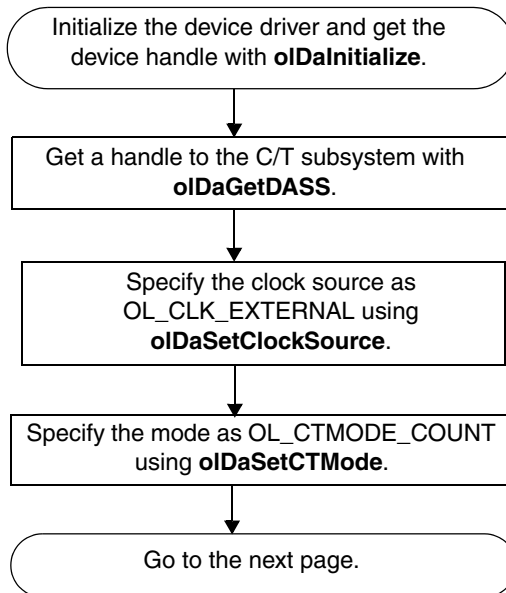


Specify the appropriate C/T subsystem/element. The KUSB-3116 module supports five elements (0, 1, 2, 3, 4).


Frequency Measurement Operations (cont.)

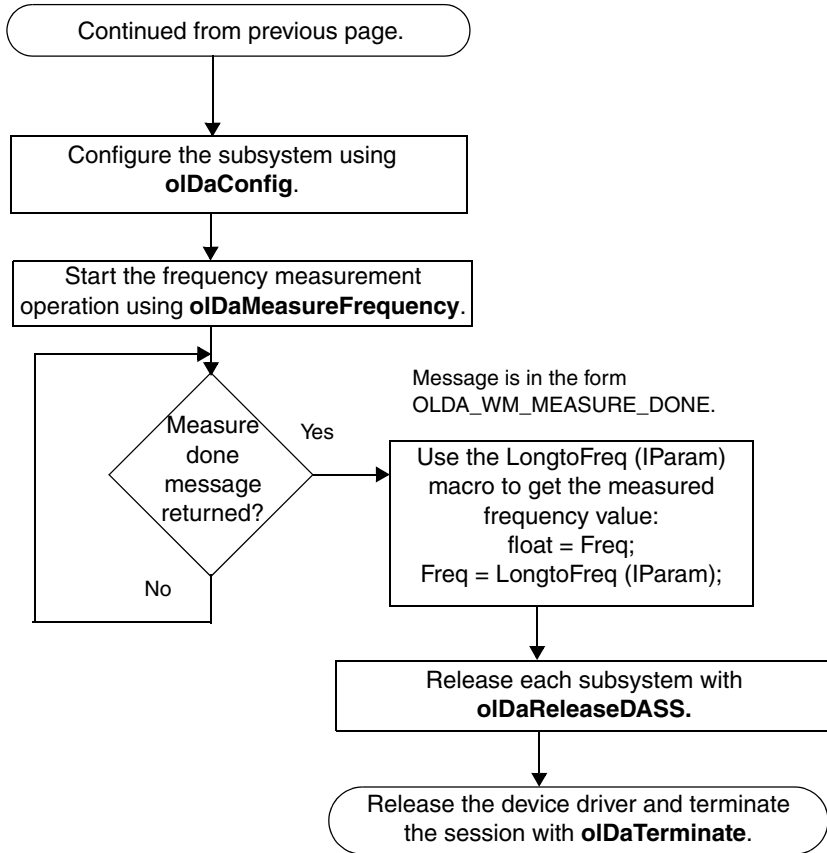


Edge-to-Edge Measurement Operations

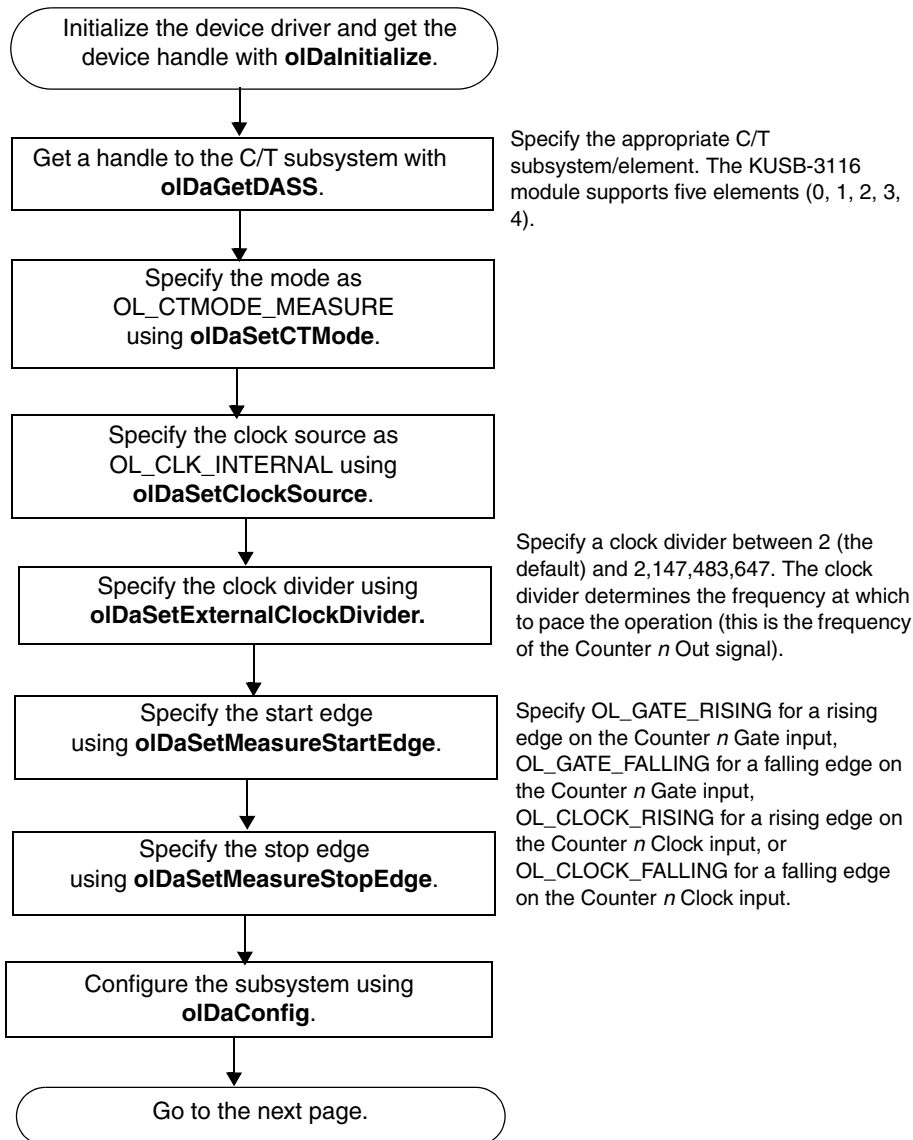


Edge-to-Edge Measurement Operations (cont.)

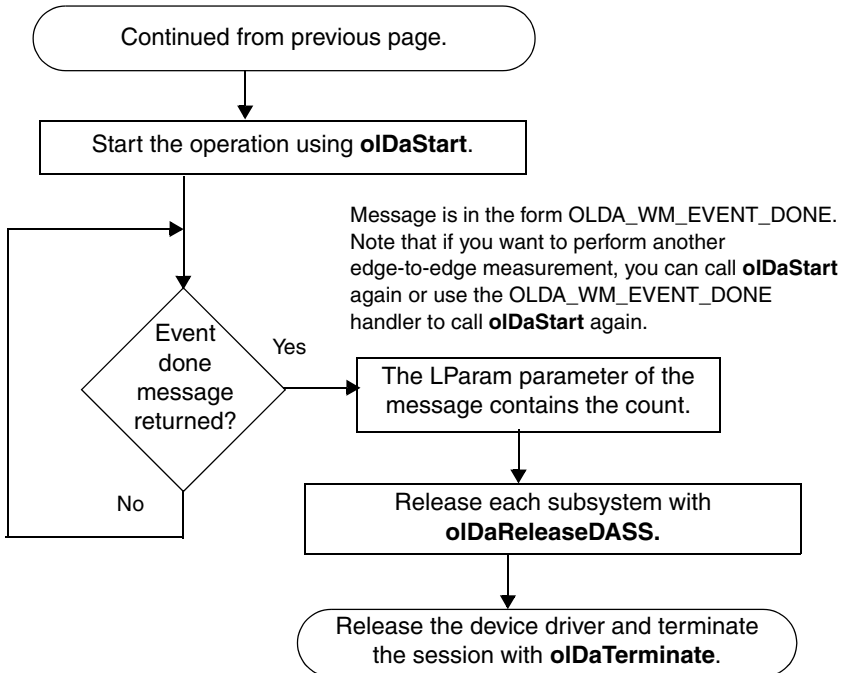


Pulse Output Operations

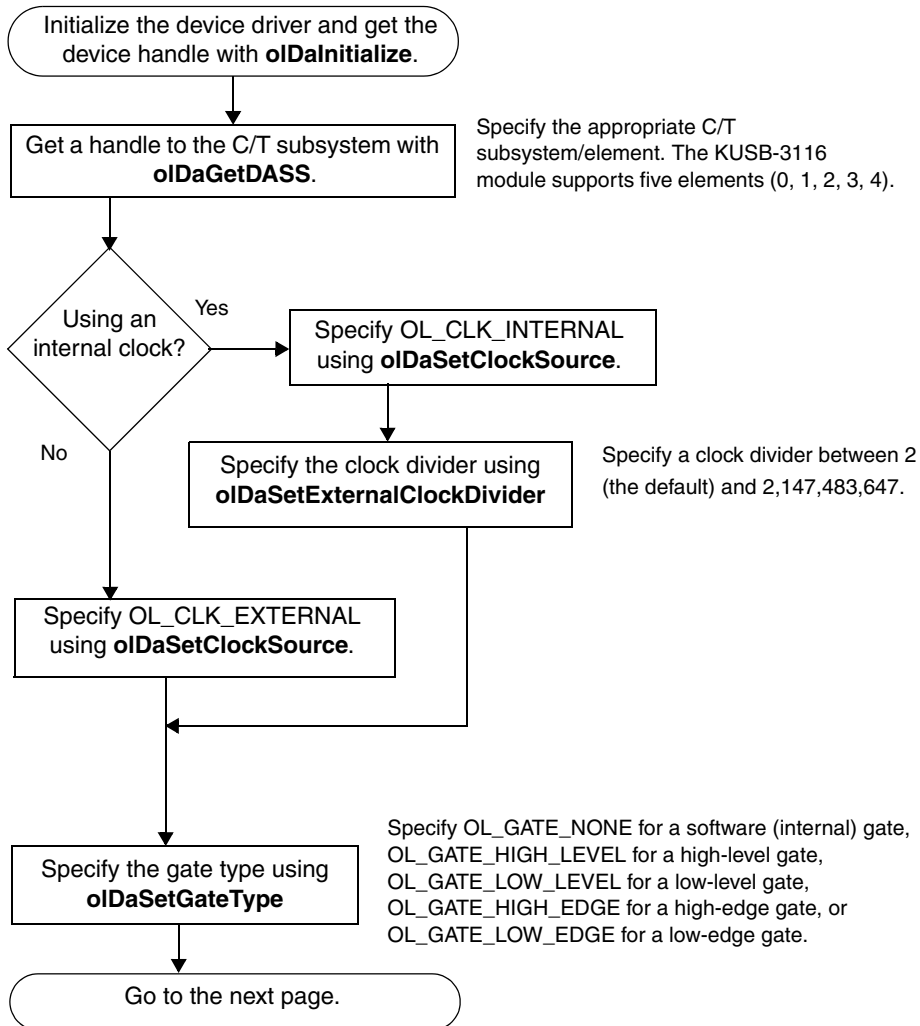

Pulse Output Operations (cont.)

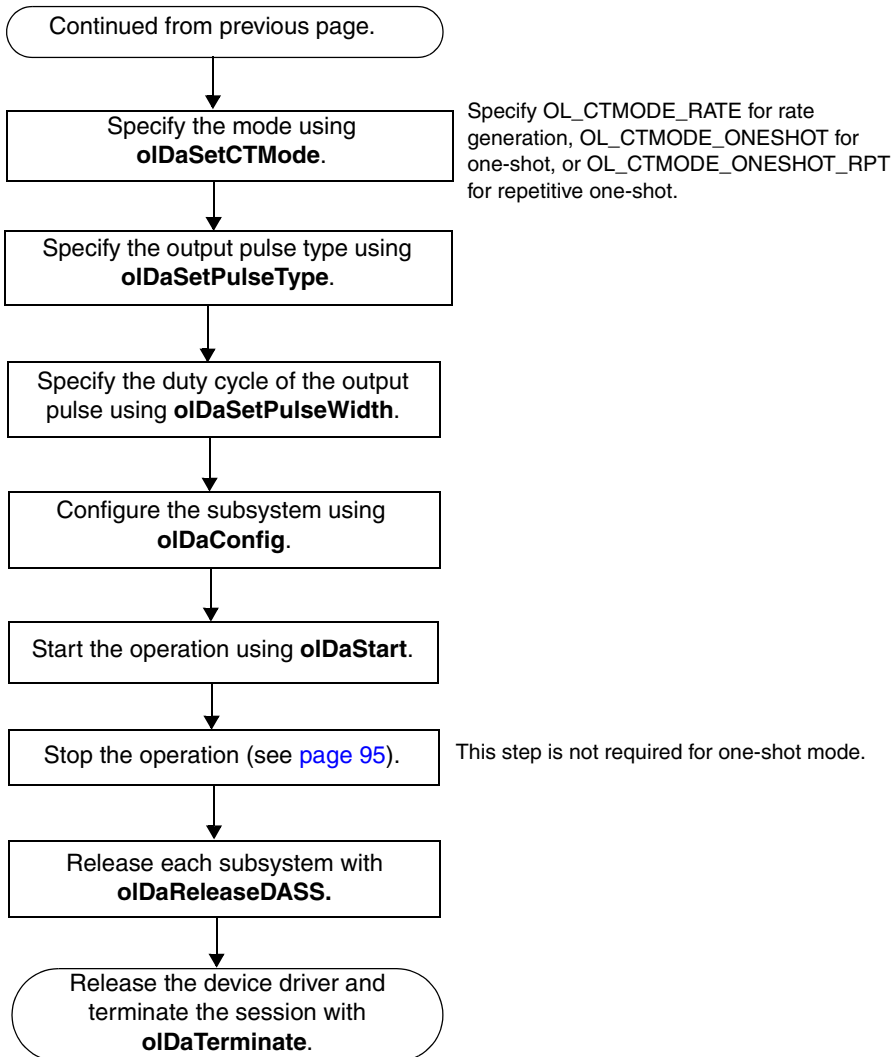


Simultaneous Operations

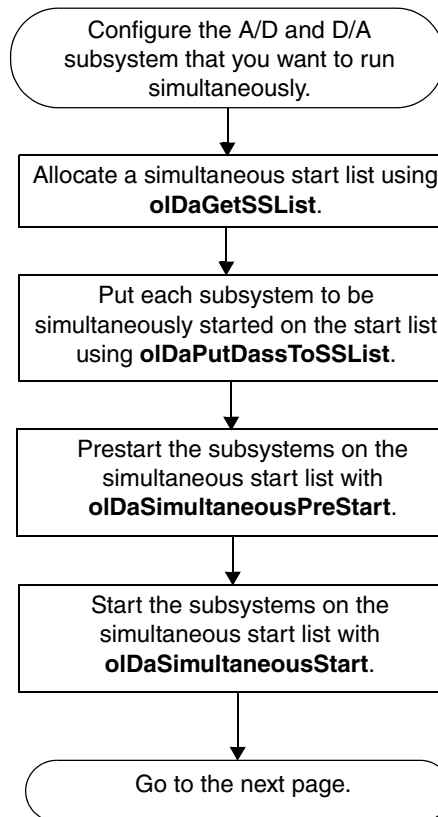


See the previous flow diagrams in this chapter; note that you cannot perform single-value operations simultaneously.


Simultaneous Operations (cont.)

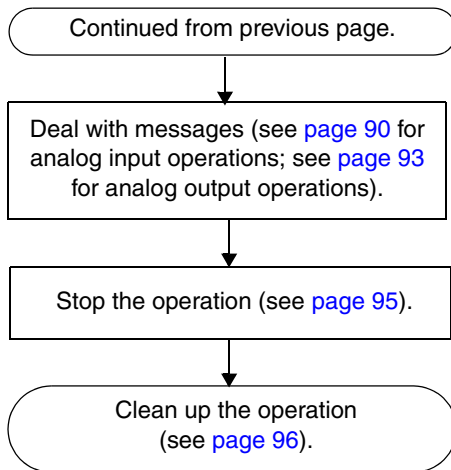


Set Up Channel List and Channel Parameters

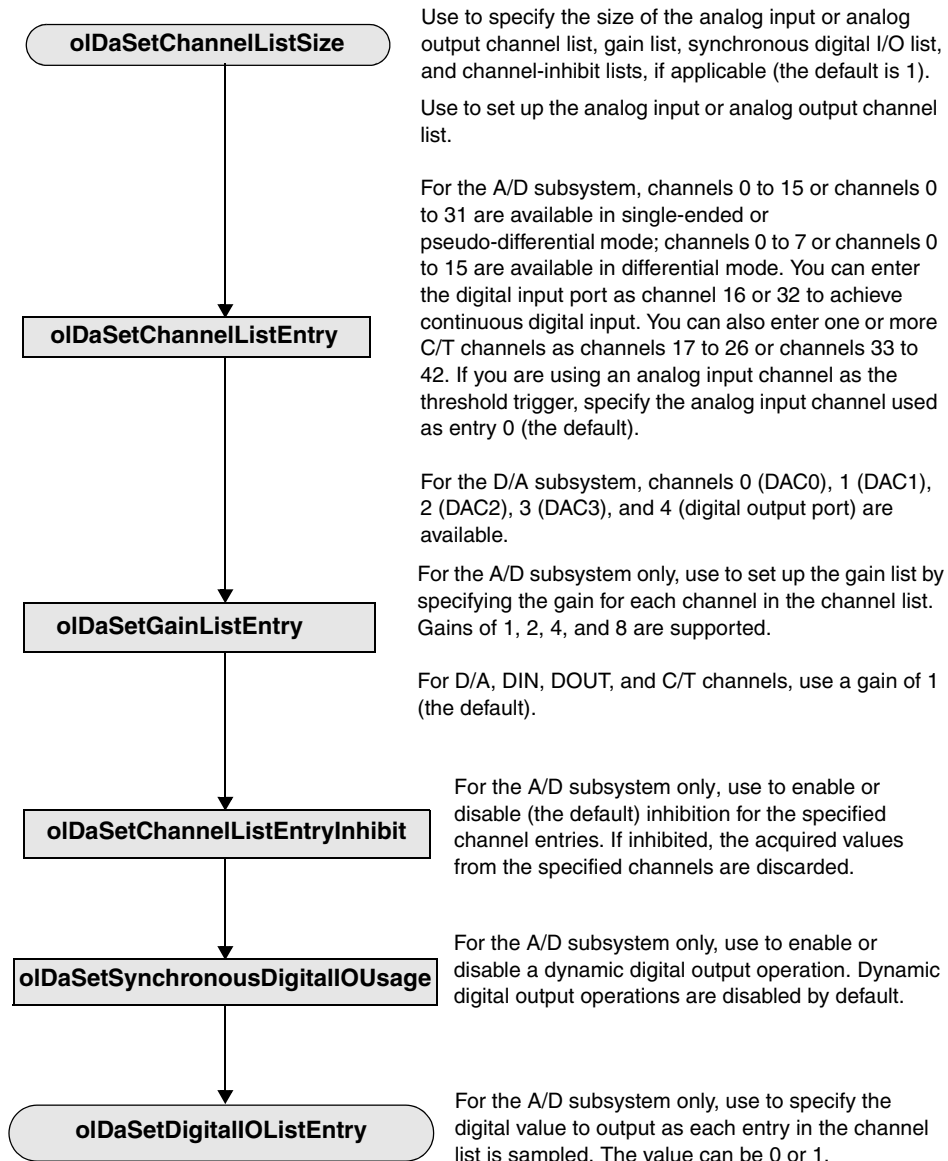


Set Clocks and Triggers

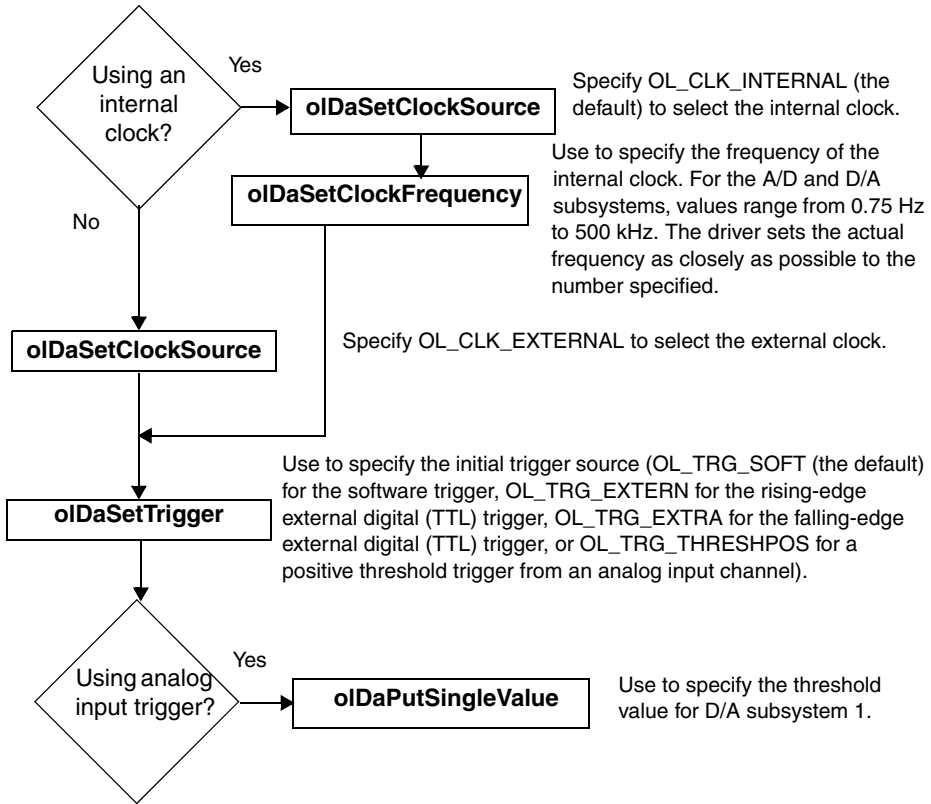


Set Up Triggered Scan Mode

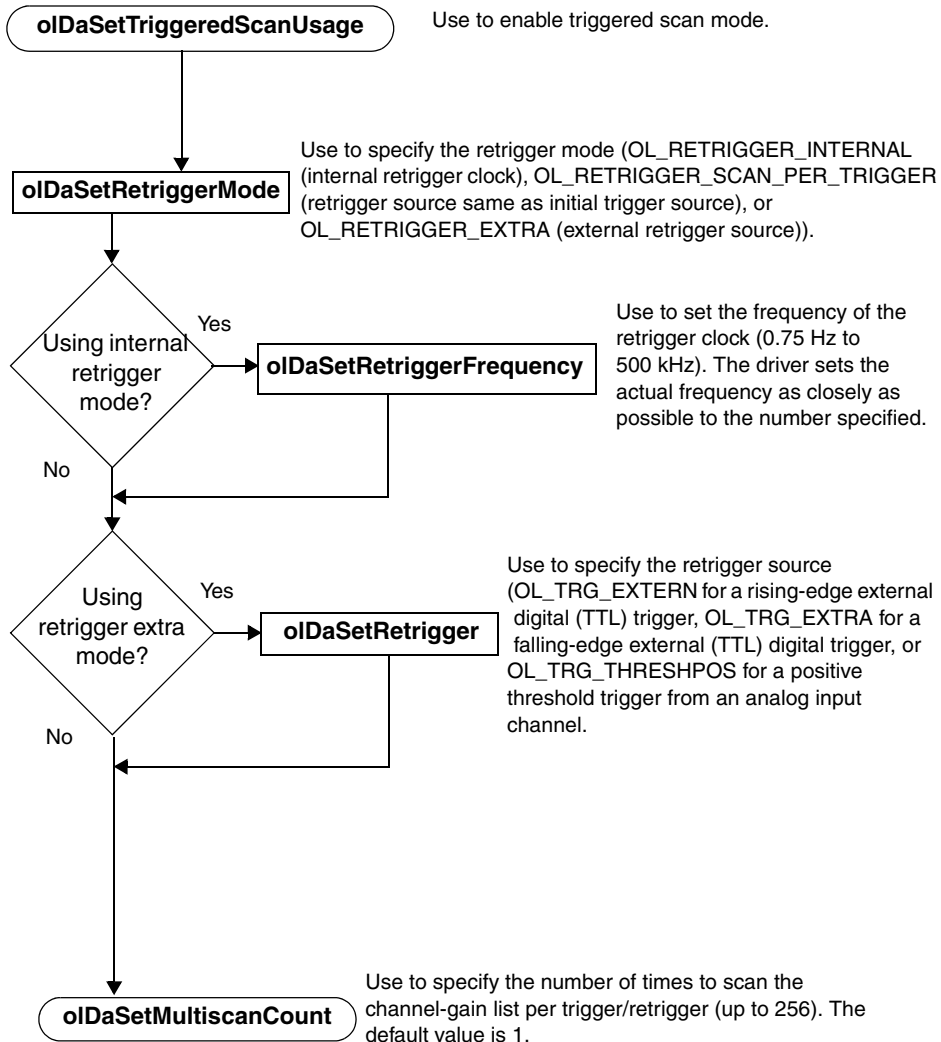


Set Up A/D Buffering

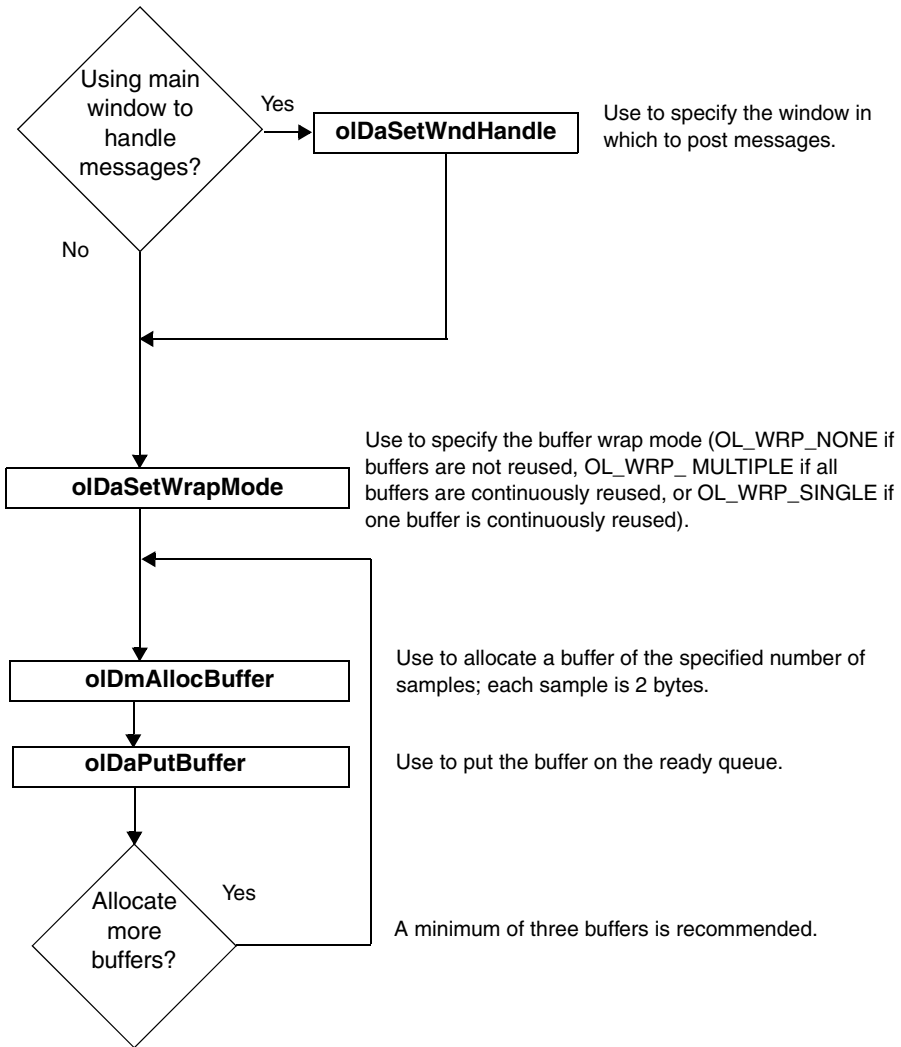


Set Up D/A Buffering

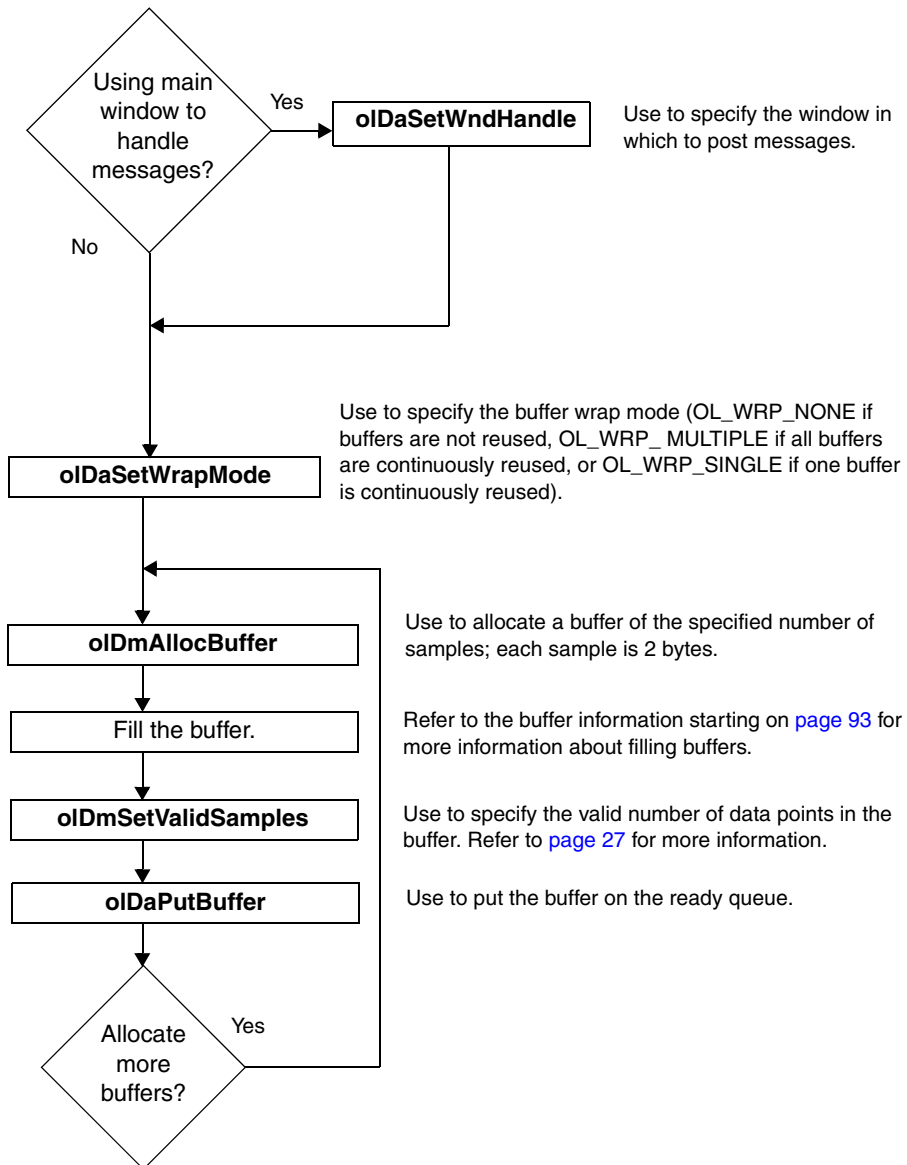


Deal with A/D Messages and Buffers

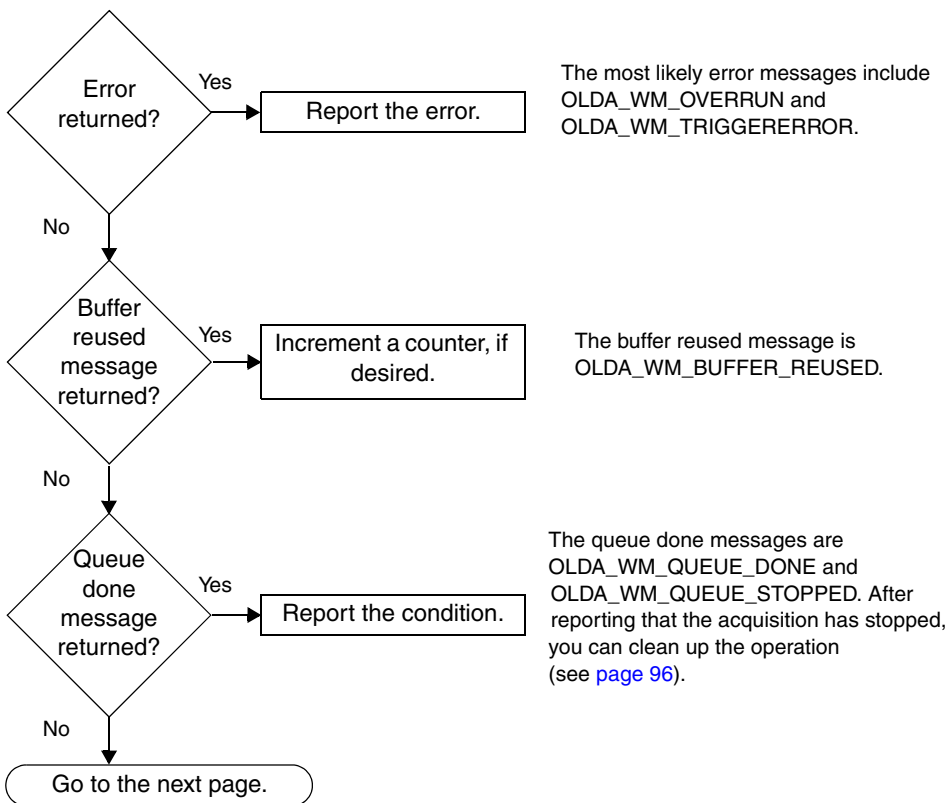


Deal with A/D Messages and Buffers (cont.)

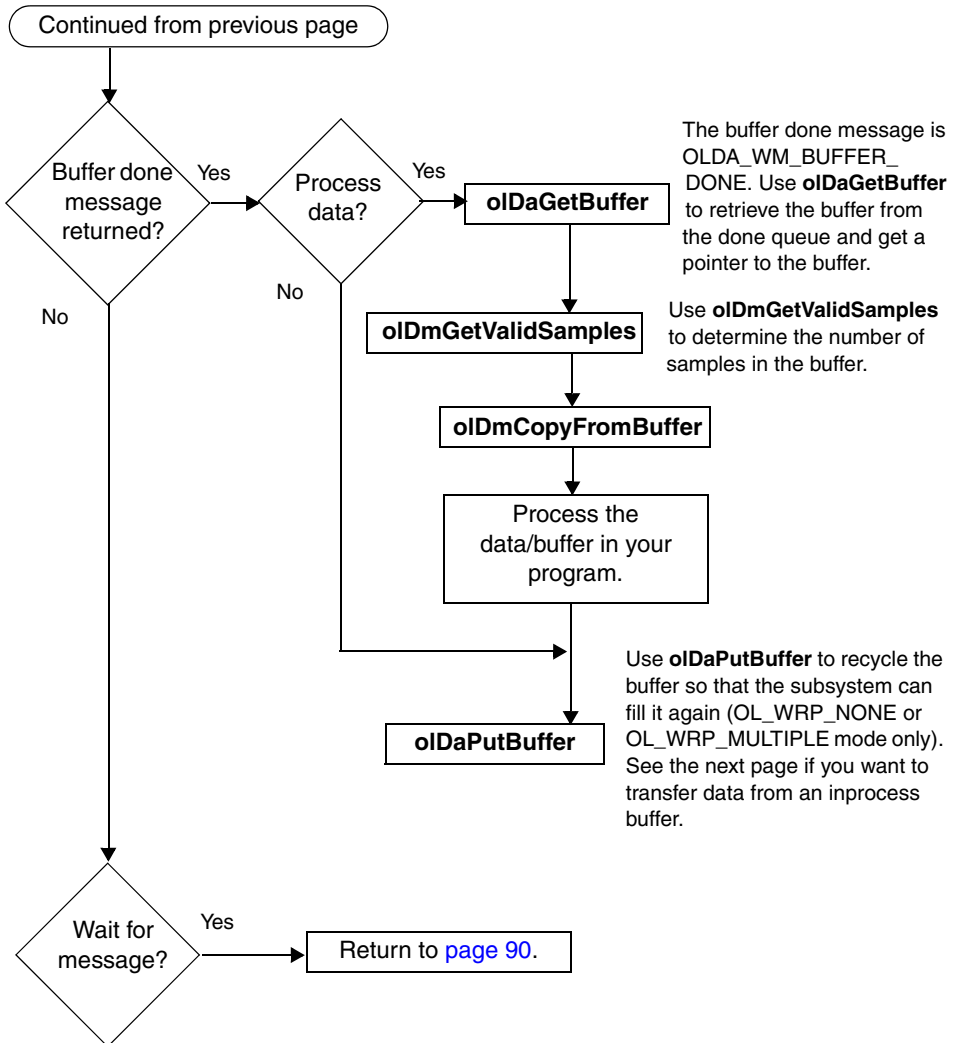

Transfer Data from an Inprocess Buffer

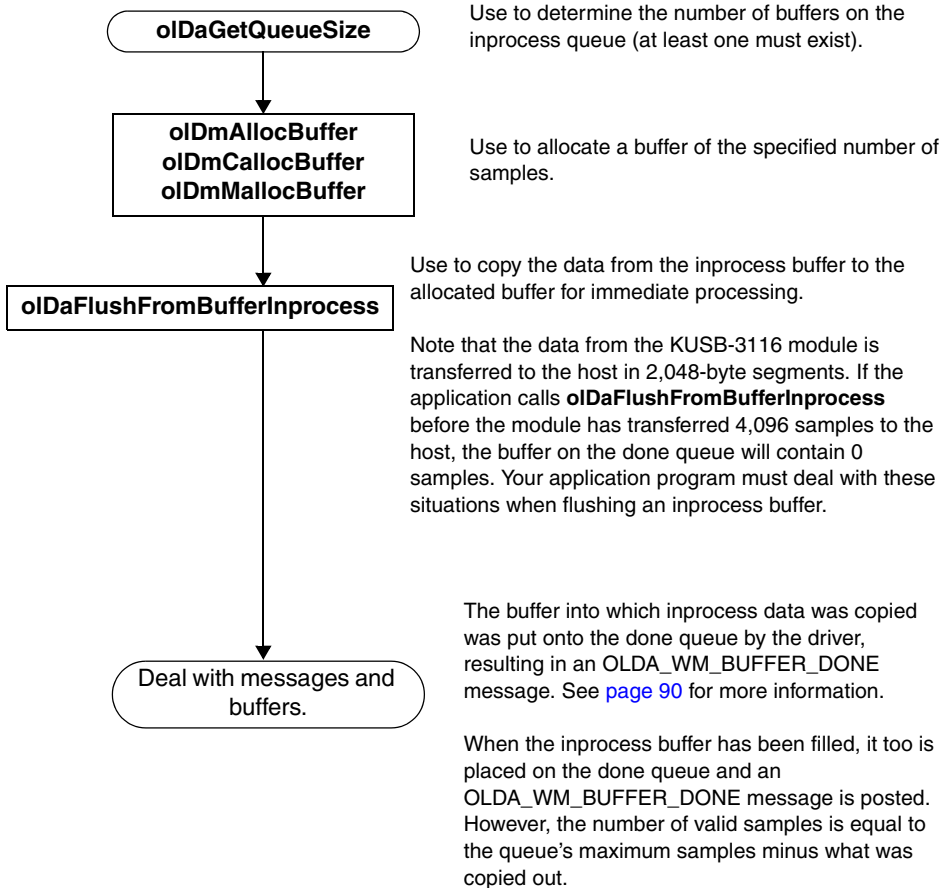

Deal with D/A Messages and Buffers

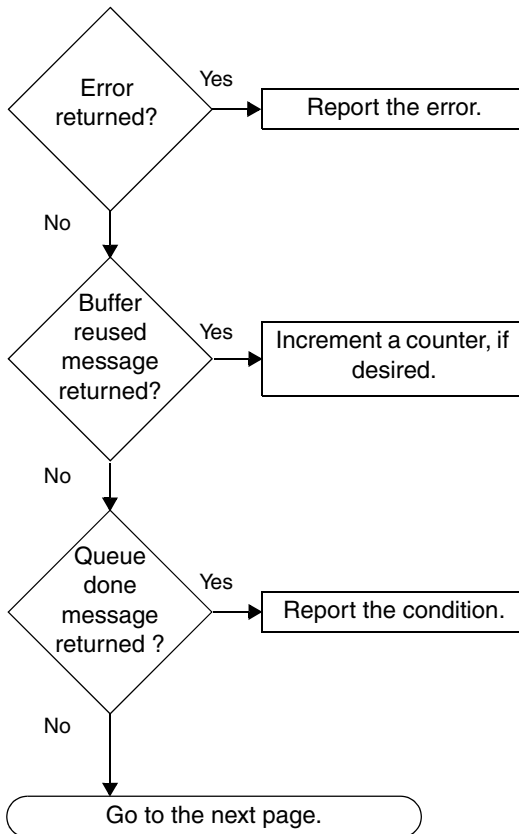


The most likely error messages include `OLDA_WM_UNDERRUN` and `OLDA_WM_TRIGGER_ERROR`.


The buffer reused message is `OLDA_WM_BUFFER_REUSED`.

The queue done messages are `OLDA_WM_QUEUE_DONE` and `OLDA_WM_QUEUE_STOPPED`. After reporting that the acquisition has stopped, you can clean up the operation (see [page 96](#)).

Deal with D/A Messages and Buffers (cont.)

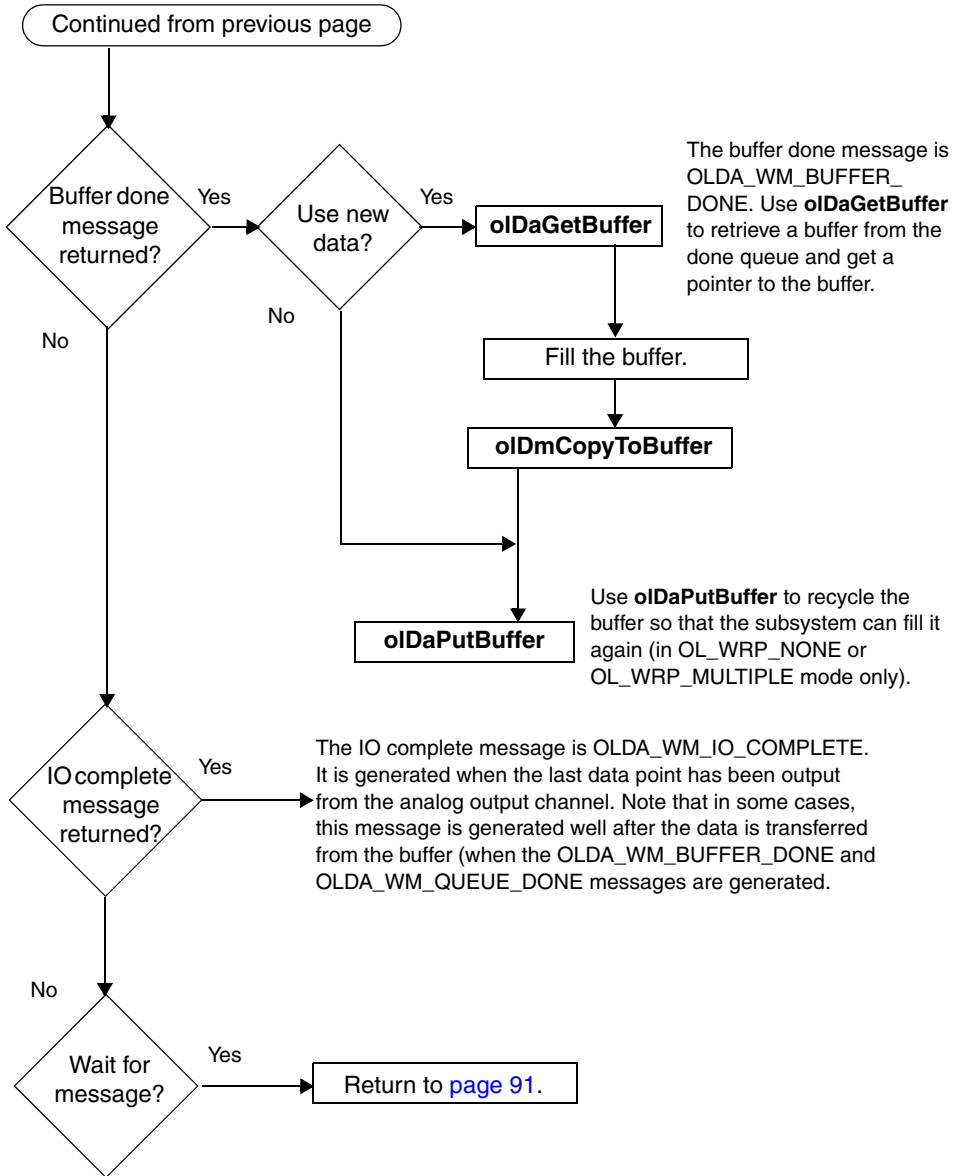


Stop the Operation

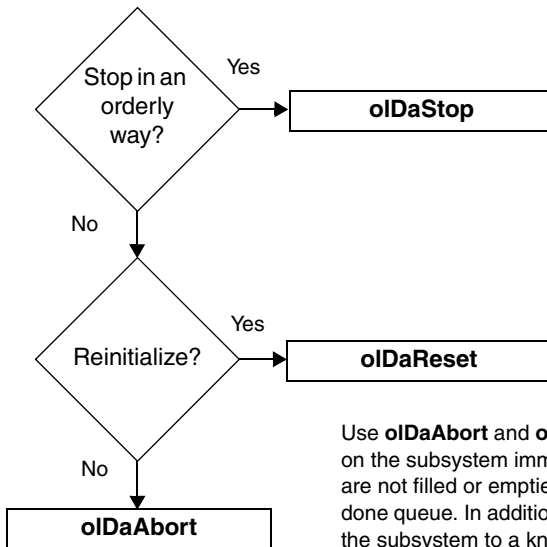

Use to fill or empty the current inprocess buffers and put them on the done queue. The driver posts at least one Buffer Done and Queue Stopped message.

Use **oIDaAbort** and **oIDaReset** to stop the operation on the subsystem immediately; the current buffers are not filled or emptied before they are put on the done queue. In addition, use **oIDaReset** to reinitialize the subsystem to a known state and flush all buffers to the done queue.

Clean Up the Operation

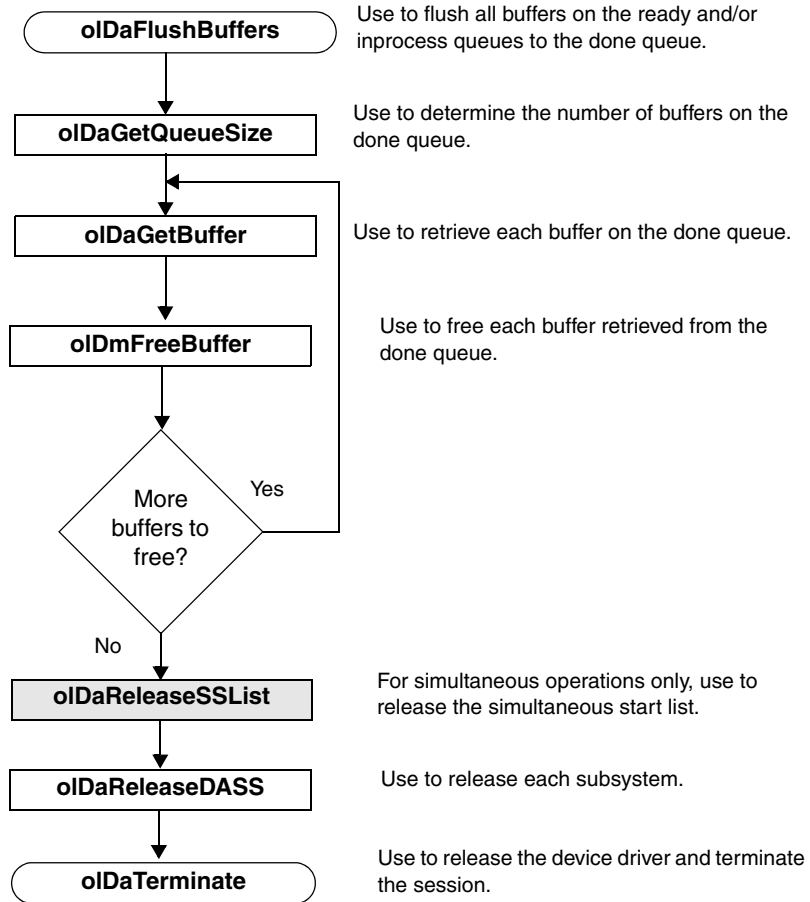



Troubleshooting

General Checklist	98
Service and Support	101

General Checklist

Should you experience problems using a KUSB-3116 module, perform the following steps:

1. Read all the documentation provided for your product. Make sure that you have added any “Read This First” information to your manual and that you have used this information.
2. Check the CD for any README files and ensure that you have used the latest installation and configuration information available.
3. Check that your system meets the requirements stated in the *KUSB-3116 Getting Started Manual*.
4. Check that you have installed your hardware properly using the instructions in the *KUSB-3116 Getting Started Manual*.
5. Check that you have installed and configured the device driver properly using the instructions in the *KUSB-3116 Getting Started Manual*.
6. Check that you have wired your signals properly using the instructions in the *KUSB-3116 Getting Started Manual*.

If you still experience problems, try using the information in [Table 4](#) to isolate and solve the problem. If you cannot identify the problem, refer to [page 99](#).

Table 4: Troubleshooting Problems

Symptom	Possible Cause	Possible Solution
Module does not respond.	The module configuration is incorrect.	Check the configuration of your device driver; see the instructions in the <i>KUSB-3116 Getting Started Manual</i> .
	The module is damaged.	Contact Keithley for technical support; refer to page 101 .
Intermittent operation.	Loose connections or vibrations exist.	Check your wiring and tighten any loose connections or cushion vibration sources; see the instructions in the <i>KUSB-3116 Getting Started Manual</i> .
	The module is overheating.	Check environmental and ambient temperature; consult the module's specifications on page 112 of this manual and the documentation provided by your computer manufacturer for more information.
	Electrical noise exists.	Check your wiring and either provide better shielding or reroute unshielded wiring; see the instructions in the <i>KUSB-3116 Getting Started Manual</i> .
Device failure error reported.	The KUSB-3116 module cannot communicate with the Microsoft bus driver or a problem with the bus driver exists.	Check your cabling and wiring and tighten any loose connections; see the instructions in the <i>KUSB-3116 Getting Started Manual</i> .
	The KUSB-3116 module was removed while an operation was being performed.	Ensure that your KUSB-3116 module is properly connected; see the instructions in the <i>KUSB-3116 Getting Started Manual</i> .

Table 4: Troubleshooting Problems (cont.)

Symptom	Possible Cause	Possible Solution
Data appears to be invalid.	An open connection exists.	Check your wiring and fix any open connections; see the instructions in the <i>KUSB-3116 Getting Started Manual</i> .
	A transducer is not connected to the channel being read.	Check the transducer connections; see the instructions in the <i>KUSB-3116 Getting Started Manual</i> .
	The module is set up for differential inputs while the transducers are wired as single-ended inputs or vice versa.	Check your wiring and ensure that what you specify in software matches your hardware configuration; see the instructions in the <i>KUSB-3116 Getting Started Manual</i> .
	The KUSB-3116 module is out of calibration.	KUSB-3116 modules are calibrated at the factory and should not require recalibration. Contact Keithley.
Computer does not boot.	The power supply of the computer is too small to handle all the system resources.	Check the power requirements of your system resources and, if needed, get a larger power supply; consult the module's specifications on page 112 of this manual.
USB 2.0 is not recognized.	Your operating system does not have the appropriate Service Pack installed.	Ensure that you load the appropriate Windows Service Pack (version 1 for Windows XP or version 4 for Windows 2000). If you are unsure of whether you are using USB 2.0 or USB 1.1, run the Open Layers Control Panel applet, described in the <i>KUSB-3116 Getting Started Manual</i> .
	Standby mode is enabled on your PC.	For some PCs, you may need to disable standby mode on your system for proper USB 2.0 operation. Consult Microsoft for more information.

Service and Support

For the latest tips, software fixes, and other product information, you can always access our World-Wide Web site at the following address:
<http://www.keithley.com>

If you have difficulty using a KUSB-3116 module, the Keithley Technical Support Department is available to provide technical assistance.

For the most efficient service, complete the form on [page 102](#) and be at your computer when you call for technical support. This information helps to identify specific system and configuration-related problems and to replicate the problem in house, if necessary.

Information Required for Technical Support

Name: _____ Phone _____

Contract Number: _____

Address: _____

Hardware product(s): _____

serial number: _____

configuration: _____

Device driver: _____

version: _____

Software: _____

serial number: _____ version: _____

PC make/model: _____

operating system: _____ version: _____

Windows version: _____

processor: _____ speed: _____

RAM: _____ hard disk space: _____

network/number of users: _____ disk cache: _____

graphics adapter: _____ data bus: _____

I have the following modules and applications installed in my system: _____

I am encountering the following problem(s): _____

and have received the following error messages/codes: _____

I have run the module diagnostics with the following results: _____

You can reproduce the problem by performing these steps:

1. _____

2. _____

3. _____



Specifications

Table 5 lists the specifications for the A/D subsystem on the KUSB-3116 module.

Table 5: A/D Subsystem Specifications

Feature	Specifications
Number of analog input channels Single-ended: Pseudo-differential: Differential:	16 16 8
Number of gains	4 (1, 2, 4, 8)
Resolution	16 bits
Data encoding	Offset binary
System accuracy, to % of FSR Gain = 1: Gain = 2: Gain = 4: Gain = 8:	±0.01% ±0.02% ±0.02% ±0.03%
Range	±10 V, ±5 V, ±2.5 V, ±1.25 V
Nonlinearity	<½ LSB
Differential nonlinearity	½ LSB
Inherent quantizing error	½ LSB
Drift Zero: Gain: Differential linearity:	±10 µV/°C ±30 ppm of FSR/°C ±2 ppm of FSR/°C
Input impedance Off channel: On channel:	100 MΩ, 10 pF 100 MΩ, 100 pF
Input bias current	±20 nA

Table 5: A/D Subsystem Specifications (cont.)

Feature	Specifications
Common mode voltage	±11 V, maximum
Common mode rejection ratio	80 dB, gain = 1 @ 1 kΩ
Maximum input voltage (without damage) Power on: Power off:	±35 V ±20 V
A/D conversion time	2.0 μs
Channel acquisition time (±½ LSB)	1 μs, typical
Sample-and-hold Aperture uncertainty: Aperture delay:	0.2 ns, typical 50 ns, typical
Throughput Single channel: Multiple channel:	500 kSamples/s 500 kSamples/s ±0.05% per channel
ESD protection Arc: Contact:	8 kV 4 kV
Reference	+5 V ±0.010 V
Monotonicity	1 LSB

A

Table 6 lists the specifications for the D/A subsystem on the KUSB-3116 module.

Table 6: D/A Subsystem Specifications

Feature	Specifications
Number of analog output channels	4
Resolution	16 bits
Data encoding	Offset binary
Nonlinearity	1.0 LSB
Differential nonlinearity	1.0 LSB
Inherent quantizing error	1.0 LSB
Output range	± 10 V
Error Zero: Gain:	Adjustable to 0 Adjustable to 0
Drift Zero (bipolar): Gain:	± 10 ppm of FSR/ $^{\circ}$ C ± 30 ppm of FSR/ $^{\circ}$ C
Throughput Waveform generation mode: Continuously paced analog output mode	500 kSamples/s per channel 500 kSamples/s per channel
FIFO	128 kSamples, total
Current output	± 5 mA maximum load
Output impedance	0.1 Ω maximum
Capacitive driver capability	0.004 μ F
Protection	Short circuit to analog ground
Power-on voltage	0 V ± 10 mV maximum

Table 6: D/A Subsystem Specifications (cont.)

Feature	Specifications
Settling time to 0.01% of FSR	4.0 μ s, 100 mV steps 5.0 μ s, 10 V steps
Slew rate	10 V/ μ s
Glitch energy	12 nV/s, typical
ESD protection Arc: Contact:	8 kV 4 kV
Monotonicity	1 LSB

A

Table 7 lists the specifications for the DIN/DOOUT subsystems on the KUSB-3116 module.

Table 7: DIN/DOOUT Subsystem Specifications

Feature	Specifications
Number of digital I/O lines	32 (16 digital input, 16 digital output)
Number of ports	2 (16 bits each)
Number of dynamic digital output lines	1
Input termination	Inputs tied to +3.3 V through 15 k Ω pull-up resistors
Logic family	LVTTTL (+5 V tolerance)
Logic sense	Positive true
Inputs Input type: Input logic load: High input voltage: Low input voltage: Low input current:	Level-sensitive 1 LVTTTL 2.0 V minimum 0.8 V maximum -0.4 mA maximum
Outputs Fan out: High output: Low output: High output current: Low output current:	12 mA 2.0 V minimum 0.8 V maximum -12 mA maximum 12 mA maximum
Interrupt on change	Yes
Clocked with sample clock	Yes
Software I/O selectable	No

Table 8 lists the specifications for the C/T subsystems on the KUSB-3116 module.



Table 8: C/T Subsystem Specifications

Feature	Specifications
Number of counter/timers	5
Resolution	32 bits per channel
Minimum pulse width (minimum amount of time it takes a C/T to recognize an input pulse)	55.5 ns
Logic family	LVTTL (+5 V tolerance)
Inputs Input logic load: High input voltage: Low input voltage: Low input current:	1 LVTTL 2.0 V minimum 0.8 V maximum -0.4 mA maximum
Outputs Fan out: High output: Low output: High output current: Low output current:	12 mA 2.0 V minimum 0.8 V maximum -12 mA maximum 12 mA maximum

Table 9 lists the specifications for the external A/D and D/A triggers on the KUSB-3116 module.

Table 9: External A/D and D/A Trigger Specifications

Feature	Specifications
Trigger sources Internal: External:	Software-initiated Software-selectable
Input type	Edge-sensitive
Logic family	LVTTTL (+5 V tolerance)
Inputs Input logic load: Input termination: High input voltage: Low input voltage: High input current: Low input current:	1 LVTTTL 2.2 k Ω pull-up to +3.3 V 2.0 V minimum 0.8 V maximum 25 μ A maximum -0.25 mA maximum
Minimum pulse width High: Low:	25 ns 25 ns
Triggering modes Single scan: Continuous scan: Triggered scan:	Yes Yes Yes

Table 10 lists the specifications for the internal A/D and D/A clocks on the KUSB-3116 module.

Table 10: Internal A/D and D/A Clock Specifications

Feature	Specifications
Reference frequency	18 MHz
Divisor range	3 to 4,294,967,295
Usable range	0.00210 Hz to 500 kHz

Table 11 lists the specifications for the external A/D and D/A clocks on the KUSB-3116 module.

Table 11: External A/D and D/A Clock Specifications

Feature	Specifications
Input type	Edge-sensitive, rising or falling edge programmable
Logic family	LVTTL (+5 V tolerance)
Inputs Input logic load: Input termination: High input voltage: Low input voltage: Low input current:	1 LVTTL 2.2 k Ω pull-up to +3.3 V 2.0 V 0.8 V 1.2 mA
Oscillator frequency	DC to 9 MHz
Minimum pulse width High: Low:	25 ns 25 ns

Table 12 lists the power, physical, and environmental specifications for the KUSB-3116 module.

Table 12: Power, Physical, and Environmental Specifications

Feature	Specifications
Power, +5 V	±5% @ 2 A maximum
Physical Dimensions	184.4 mm x 100 mm (7.30 X 3.94 inches)
Environmental	
Operating temperature range (OEM):	0° C to 55° C
Operating temperature range (BNC):	0° C to 45° C
Storage temperature range:	-25° C to 85° C
Relative humidity:	To 95%, noncondensing

Table 13 lists the mating cable connectors for the connectors on the KUSB-3116 module.

Table 13: Mating Cable Connectors

Connector	Part Number on Module (or Equivalent)	Mating Cable Connector
Analog input	AMP/Tyco 747375-8	AMP/Tyco 747917-2
Digital I/O	AMP/Tyco 747301-8	AMP/Tyco 747916-2
C/T, DAC, Clk, Trig	AMP/Tyco 747301-8	AMP/Tyco 747916-2



Connector Pin Assignments

Analog Input Connector	114
Digital I/O Connector	116
Analog Output, Counter/Timer, Clock, and Trigger Connector	118

Analog Input Connector

Table 14 lists the pin assignments for the analog input connector on the KUSB-3116 module.

Table 14: Analog Input Connector Pin Assignments

Pin Assignment	Signal Description	Pin Assignment	Signal Description
1	Analog Input 0	2	Analog Input 1
3	Analog Input 2	4	Analog Input 3
5	Analog Input 4	6	Analog Input 5
7	Analog Input 6	8	Analog Input 7
9	Analog Input 8	10	Analog Input 9
11	Analog Input 10	12	Analog Input 11
13	Analog Input 12	14	Analog Input 13
15	Analog Input 14	16	Analog Input 15
17	Amplifier Low	18	+5 V Analog
19	Chassis Ground	20	Analog Input 0 Return/ Analog In 8 ^a
21	Analog Input 1 Return/ Analog In 9 ^a	22	Analog Input 2 Return/ Analog In 10 ^a
23	Analog Input 3 Return/ Analog In 11 ^a	24	Analog Input 4 Return/ Analog In 12 ^a
25	Analog Input 5 Return/ Analog In 13 ^a	26	Analog Input 6 Return/ Analog In 14 ^a
27	Analog Input 7 Return/ Analog In 15 ^a	28	Analog Input 8 Return ^a
29	Analog Input 9 Return ^a	30	Analog Input 10 Return ^a

Table 14: Analog Input Connector Pin Assignments (cont.)

Pin Assignment	Signal Description	Pin Assignment	Signal Description
31	Analog Input 11 Return ^a	32	Analog Input 12 Return ^a
33	Analog Input 13 Return ^a	34	Analog Input 14 Return ^a
35	Analog Input 15 Return ^a	36	Analog Ground
37	Digital Ground		

- a. The first signal description (Return) applies to the differential configuration for all modules.
The second signal description applies to the single-ended configuration for the module.

B

Digital I/O Connector

Table 15 lists the pin assignments for the digital I/O connector on the KUSB-3116 module.

Table 15: Digital I/O Connector Pin Assignments

Pin Assignment	Signal Description	Pin Assignment	Signal Description
1	Digital Input 0	2	Digital Input 1
3	Digital Input 2	4	Digital Input 3
5	Digital Input 4	6	Digital Input 5
7	Digital Input 6	8	Digital Input 7
9	Digital Input 8	10	Digital Input 9
11	Digital Input 10	12	Digital Input 11
13	Digital Input 12	14	Digital Input 13
15	Digital Input 14	16	Digital Input 15
17	Digital Ground	18	Digital Ground
19	Chassis Ground	20	Digital Output 0
21	Digital Output 1	22	Digital Output 2
23	Digital Output 3	24	Digital Output 4
25	Digital Output 5	26	Digital Output 6
27	Digital Output 7	28	Digital Output 8
29	Digital Output 9	30	Digital Output 10
31	Digital Output 11	32	Digital Output 12

Table 15: Digital I/O Connector Pin Assignments (cont.)

Pin Assignment	Signal Description	Pin Assignment	Signal Description
33	Digital Output 13	34	Digital Output 14
35	Digital Output 15	36	Dynamic Digital Output
37	Digital Ground		

B

Analog Output, Counter/Timer, Clock, and Trigger Connector

Table 16 lists the pin assignments for the analog output, counter/timer, clock, and trigger connector on the KUSB-3116 module.

Table 16: Analog Output, Counter/Timer, Clock, and Trigger Connector Pin Assignments

Pin Assignment	Signal Description	Pin Assignment	Signal Description
1	Analog Output 0	2	Analog Output 1
3	Analog Output 2	4	Analog Output 3
5	Digital Ground	6	External DAC Clock
7	External ADC Clock	8	Counter 0 Clock
9	Counter 0 Out	10	Counter 1 Clock
11	Counter 1 Out	12	Counter 2 Clock
13	Counter 2 Out	14	Counter 3 Clock
15	Counter 3 Out	16	Counter 4 Clock
17	Counter 4 Out	18	Digital Ground
19	Chassis Ground	20	Analog Output 0 Return
21	Analog Output 1 Return	22	Analog Output 2 Return
23	Analog Output 3 Return	24	Digital Ground
25	External DAC Trigger	26	External ADC Trigger
27	Digital Ground	28	Counter 0 Gate
29	Digital Ground	30	Counter 1 Gate
31	Digital Ground	32	Counter 2 Gate

**Table 16: Analog Output, Counter/Timer, Clock, and Trigger Connector
Pin Assignments (cont.)**

Pin Assignment	Signal Description	Pin Assignment	Signal Description
33	Digital Ground	34	Counter 3 Gate
35	Digital Ground	36	Counter 4 Gate
37	Digital Ground		

B

Index

A

- A/D Over Sample error [25](#)
- A/D subsystem specifications [104](#)
- aborting an operation [95](#)
- aliasing [16](#)
- analog input
 - channel-gain list for analog input channels [9](#)
 - channel-gain list for counter/timers [11](#)
 - channel-gain list for digital input port [10](#)
 - channels [7](#)
 - continuous operations [17](#)
 - conversion modes [17](#)
 - data format and transfer [23](#)
 - differential configuration [8](#)
 - error conditions [25](#)
 - gain [14](#)
 - pseudo-differential configuration [8](#)
 - ranges [14](#)
 - resolution [7](#)
 - sample clock sources [16](#)
 - single-ended configuration [7](#)
 - single-ended operations [17](#)
 - triggers [22](#)
- analog output
 - channel list [27](#)
 - channels [26](#)
 - clock sources [29](#)
 - continuous operations [30](#)
 - conversion modes [30](#)

- data format and transfer [33](#)
- error conditions [34](#)
- gain [28](#)
- ranges [28](#)
- resolution [26](#)
- single-value operations [30](#)
- subsystem specifications [106](#)
- analog threshold trigger [23](#), [29](#)
- applet, Open Layers Control Panel [8](#), [36](#), [60](#), [100](#)

B

- base clock frequency [57](#)
- binary data encoding [56](#)
- buffers [53](#), [88](#), [89](#)
 - cleaning up [96](#)
 - dealing with for A/D operations [90](#)
 - dealing with for D/A operations [93](#)
 - inprocess flush [54](#)
 - multiple wrap mode [54](#), [88](#), [89](#)
 - setting up for A/D operations [88](#)
 - setting up for D/A operations [89](#)
 - single wrap mode [53](#), [88](#), [89](#)
 - transferring from inprocess [92](#)
 - waveform generation mode [54](#)

C

- C/T, *see* counter/timer [109](#)
- calibration [60](#)
- CGL, *see* channel-gain list [55](#)

- channel type
 - differential 56
 - single-ended 56
- channel-gain list 85
 - depth 55
 - for analog input channels 9
 - for counter/timers 11
 - for digital input port 10
 - inhibiting 55, 85
 - random 55
 - sequential 55
 - zero start 55
- channel-inhibit list 9
- channels
 - analog input 7
 - analog output 26
 - counter/timer 38
 - digital I/O 35
 - number of 56
 - setting up parameters for 85
- cleaning up an operation 96
- clock divider 79, 81
- clock sources
 - analog input 16
 - analog output 29
 - counter/timer 39
- clocks
 - base frequency 57
 - clock divider 79, 81
 - external 57, 86
 - frequency 86
 - internal 57, 73, 75, 77, 79, 81, 86
 - maximum external clock divider 57
 - maximum throughput 58
 - minimum external clock divider 58
 - minimum throughput 58
 - number of extra 57
 - setting parameters for analog input operations 86
 - simultaneous 57
 - specifications 111
- continuous analog input
 - externally retriggered scan mode 21
 - how to perform 67
 - internally retriggered scan mode 20
 - post-trigger 53
 - pre-trigger 53
 - scan operations 18
- continuous analog output 53
 - continuously paced 31
 - how to perform 69
 - waveform generation mode 32
- continuous counter/timer 53
- continuous digital I/O 36, 53
 - how to perform digital input 71
 - how to perform digital output 72
- Control Panel applet 8, 36, 60, 100
- conversion modes
 - continuous analog output 30
 - continuous scan mode 18
 - digital I/O 36
 - externally retriggered scan 21
 - internally retriggered scan 20
 - scan 17
 - single-value analog input 17
 - single-value analog output 30
- conversion rate 18, 20, 21
- counter/timer
 - channels 38, 56
 - clock sources 39, 57
 - edge-to-edge measurement mode 58
 - event counting 58
 - gate types 40
 - high-edge gate type 59

- high-level gate type 59
- high-to-low output pulse 58
- in analog input channel-gain list 11
- internal gate type 59
- low-edge gate type 59
- low-level gate type 59
- low-to-high output pulse 58
- one-shot mode 58
- rate generation mode 58
- repetitive one-shot mode 58
- subsystem specifications 109
- up/down counting 58

counting events 43

D

D/A, *see* analog output 106

DAC Over Sample error 34

data encoding 23, 33, 56

data flow modes

- continuous analog input operations 67
- continuous analog output operations 69
- continuous C/T 53
- continuous digital input operations 53
- continuous post-trigger operations 53
- continuous pre-trigger operations 53
- single-value operations 53, 65

data format and transfer

- analog input 23
- analog output 33

data processing 60

DataAcq SDK 4

device driver 4

- differential channels 8, 56
- digital I/O 35
 - lines 35
 - operation modes 36
 - subsystem specifications 108
 - synchronous 85
- digital input port 36
 - in analog input channel-gain list 10
- digital output line, dynamic 13, 37
- digital output port 36
 - in output channel list 27
- digital trigger 23, 29
- DT-LV Link 4
- DTx-EZ 4
- duty cycle 41
- dynamic digital output 13, 37

E

- edge-to-edge measurement mode 45, 58
- encoding data 23, 33
- environmental specifications 112
- errors
 - analog input 25, 90
 - analog output 34, 93
 - over sample 25, 34
 - overflow 25
 - underflow 34
- event counting 43, 58
 - how to perform 73, 75, 79
- external clock 39, 57, 86
- external clock divider
 - maximum 57
 - minimum 58
- external digital trigger 23, 29, 57
- externally retriggered scan mode 21

extra retrigger 54

F

features 2

formatting data

 analog input 23

 analog output 33

frequency

 base clock 57

 external A/D clock 16

 external C/T clock 39

 external DAC clock 30

 internal A/D clock 16, 58, 86

 internal A/D sample clock 58

 internal C/T clock 39, 58

 internal DAC clock 29

 internal retrigger clock 55

 output pulse 46

 retrigger 87

frequency measurement 44

 how to perform 77

G

gain

 analog input 14

 analog output 28

 number of 55

gap-free data 54

gate type 40, 73, 81

 high-edge 59

 high-level 59

 internal 59

 low-edge 59

 low-level 59

generating pulses 46, 47, 48

H

hardware features 2

high-edge gate type 59

high-level gate type 59

I

inhibiting channel-gain list 85

inprocess buffers 54, 92

input

 channels 7

 ranges 14

 resolution 7

 sample clock sources 16

input configuration

 differential analog 8

 pseudo-differential analog 8

 single-ended analog 7

Input FIFO Overflow error 25

internal

 clock 39, 57, 73, 75, 77, 79, 81, 86

 gate type 59

 retrigger 54

internally retriggered scan mode 20

interrupt-on-change operations 36

interrupts 60

L

lines, digital I/O 35

LongtoFreq macro 78

low-edge gate type 59

low-level gate type 59

M

macro 78

measuring frequency [44](#)
 measuring pulses [45](#)
 messages [53](#)
 dealing with for A/D operations [90](#)
 dealing with for D/A operations [93](#)
 error [90](#), [93](#)
 multiple buffer wrap mode [54](#), [88](#), [89](#)
 multiple channels
 analog input [9](#)
 analog output [27](#)

N

number of
 differential channels [56](#)
 DMA channels [54](#)
 extra clocks [57](#)
 extra triggers [57](#)
 filters [56](#)
 gains [55](#)
 I/O channels [56](#)
 resolutions [56](#)
 scans per trigger [54](#)
 single-ended channels [56](#)
 voltage ranges [56](#)
 Nyquist Theorem [16](#)

O

OLDA_WM_BUFFER_DONE [92](#)
 OLDA_WM_BUFFER_DONE [91](#), [94](#)
 OLDA_WM_BUFFER_REUSED [90](#), [93](#)
 OLDA_WM_IO_COMPLETE [94](#)
 OLDA_WM_OVERRUN [90](#)
 OLDA_WM_QUEUE_DONE [90](#), [93](#)
 OLDA_WM_QUEUE_STOPPED [90](#),
 [93](#)

OLDA_WM_TRIGGER_ERROR [93](#)
 OLDA_WM_TRIGGERERROR [90](#)
 OLDA_WM_UNDERRUN [93](#)
olDaAbort [95](#)
olDaConfig
 in continuous A/D operations [68](#)
 in continuous D/A operations [70](#), [71](#),
 [72](#)
 in event counting operations [73](#), [75](#),
 [79](#)
 in frequency measurement
 operations [78](#)
 in pulse output operations [82](#)
 in single-value operations [65](#)
olDaFlushBuffers [96](#)
olDaFlushFromBufferInprocess [92](#)
olDaGetBuffer [91](#), [94](#), [96](#)
olDaGetDASS
 in continuous A/D operations [67](#)
 in continuous D/A operations [69](#), [71](#),
 [72](#)
 in event counting operations [73](#), [75](#),
 [79](#)
 in frequency measurement
 operations [77](#)
 in pulse output operations [81](#)
 in single-value operations [65](#)
olDaGetQueueSize [92](#), [96](#)
olDaGetSingleValue [66](#)
olDaGetSSCaps [52](#)
olDaGetSSCapsEx [52](#)
olDaGetSSList [83](#)
olDaInitialize
 in continuous A/D operations [67](#)
 in continuous D/A operations [69](#), [71](#),
 [72](#)
 in event counting operations [73](#), [75](#),

- 79
- in frequency measurement operations 77
- in pulse output operations 81
- in single-value operations 65
- olDaMeasureFrequency** 78
- olDaPutBuffer** 88, 89, 91, 94
- olDaPutDassToSSLList** 83
- olDaPutSingleValue** 66, 86
- olDaReadEvents** 74, 76
- olDaReleaseDASS**
 - in continuous A/D operations 96
 - in continuous D/A operations 96
 - in event counting operations 74, 76, 80
 - in frequency measurement operations 78
 - in pulse output operations 82
 - in single-value operations 66
- olDaReleaseSSLList** 96
- olDaReset** 95
- olDaSetChannelListEntry** 85
- olDaSetChannelListEntryInhibit** 85
- olDaSetChannelListSize** 85
- olDaSetClockFrequency** 86
- olDaSetClockSource** 73, 75, 77, 79, 81, 86
- olDaSetCTMode**
 - in event counting operations 73, 75, 79
 - in frequency measurement operations 77
 - in pulse output operations 82
- olDaSetDataFlow**
 - in continuous A/D operations 67
 - in continuous D/A operations 69
 - in single-value operations 65
- olDaSetDigitalIOListEntry** 85
- olDaSetExternalClockDivider** 79, 81
- olDaSetGainListEntry** 85
- olDaSetGateType** 73, 81
- olDaSetMeasureStartEdge** 79
- olDaSetMeasureStopEdge** 79
- olDaSetMultiscanCount** 87
- olDaSetPulseType** 82
- olDaSetPulseWidth** 82
- olDaSetRange**, in single-value operations 65
- olDaSetRetrigger** 87
- olDaSetRetriggerFrequency** 87
- olDaSetRetriggerMode** 87
- olDaSetSynchronousDigitalIOUsage** 85
- olDaSetTrigger** 86
- olDaSetTriggeredScanUsage** 87
- olDaSetWndHandle** 88, 89
- olDaSetWrapMode** 88, 89
- olDaSimultaneousPreStart** 83
- olDaSimultaneousStart** 83
- olDaStart**
 - in continuous A/D operations 68
 - in continuous D/A operations 70, 71, 72
 - in event counting operations 74, 76, 80
 - in pulse output operations 82
- olDaStop** 95
- olDaTerminate**
 - in continuous A/D operations 96
 - in continuous D/A operations 96
 - in event counting operations 74, 76, 80
 - in frequency measurement operations 78

- in pulse output operations [82](#)
- in single-value operations [66](#)
- olDmAllocBuffer** [88](#), [89](#), [92](#)
- olDmCallocBuffer** [92](#)
- olDmCopyFromBuffer** [91](#)
- olDmCopyToBuffer** [94](#)
- olDmFreeBuffer** [96](#)
- olDmGetValidSamples** [91](#)
- olDmMallocBuffer** [92](#)
- olDmSetValidSamples** [89](#)
- OLSSC_CGLDEPTH [55](#)
- OLSSC_MAX_DIGITALIOLIST_VAL
UE [55](#)
- OLSSC_MAXDICHANS [56](#)
- OLSSC_MAXMULTISCAN [54](#)
- OLSSC_MAXSECHANS [56](#)
- OLSSC_NUMCHANNELS [56](#)
- OLSSC_NUMDMACHANS [54](#)
- OLSSC_NUMEXTRACLOCKS [57](#)
- OLSSC_NUMEXTRATRIGGERS [57](#)
- OLSSC_NUMFILTERS [56](#)
- OLSSC_NUMGAINS [55](#)
- OLSSC_NUMRANGES [56](#)
- OLSSC_NUMRESOLUTIONS [56](#)
- OLSSC_SUP_BINARY [56](#)
- OLSSC_SUP_BUFFERING [53](#), [54](#)
- OLSSC_SUP_CHANNELLIST_
INHIBIT [55](#)
- OLSSC_SUP_CONTINUOUS [53](#)
- OLSSC_SUP_CONTINUOUS_PRETRI
G [53](#)
- OLSSC_SUP_CTMODE_COUNT [58](#)
- OLSSC_SUP_CTMODE_MEASURE
[58](#)
- OLSSC_SUP_CTMODE_ONESHOT
[58](#)
- OLSSC_SUP_CTMODE_ONESHOT_
RPT [58](#)
- OLSSC_SUP_CTMODE_RATE [58](#)
- OLSSC_SUP_CTMODE_UP_DOWN
[58](#)
- OLSSC_SUP_DIFFERENTIAL [56](#)
- OLSSC_SUP_EXTCLOCK [57](#)
- OLSSC_SUP_EXTERNTRIG [57](#)
- OLSSC_SUP_GAPFREE_NODMA [54](#)
- OLSSC_SUP_GATE_HIGH_EDGE [59](#)
- OLSSC_SUP_GATE_HIGH_LEVEL [59](#)
- OLSSC_SUP_GATE_LOW_EDGE [59](#)
- OLSSC_SUP_GATE_LOW_LEVEL [59](#)
- OLSSC_SUP_GATE_NONE [59](#)
- OLSSC_SUP_INPROCESSFLUSH [54](#)
- OLSSC_SUP_INTCLOCK [57](#)
- OLSSC_SUP_INTERRUPT [60](#)
- OLSSC_SUP_PLS_HIGH2LOW [58](#)
- OLSSC_SUP_PLS_LOW2HIGH [58](#)
- OLSSC_SUP_POSTMESSAGE [53](#)
- OLSSC_SUP_PROCESSOR [60](#)
- OLSSC_SUP_PROGRAMGAIN [55](#)
- OLSSC_SUP_RANDOM_CGL [55](#)
- OLSSC_SUP_RETRIGGER_EXTRA [54](#)
- OLSSC_SUP_RETRIGGER_INTERNA
L [54](#)
- OLSSC_SUP_RETRIGGER_SCAN_
PER_TRIGGER [54](#)
- OLSSC_SUP_SEQUENTIAL_CGL [55](#)
- OLSSC_SUP_SIMULTANEOUS_CLO
CKING [57](#)
- OLSSC_SUP_SIMULTANEOUS_STAR
T [53](#)
- OLSSC_SUP_SINGLEENDED [56](#)
- OLSSC_SUP_SINGLEVALUE [53](#)
- OLSSC_SUP_SOFTTRIG [57](#)
- OLSSC_SUP_SWCAL [60](#)
- OLSSC_SUP_SYNCHRONOUS_

- DIGITALIO 55
- OLSSC_SUP_THRESHTRIGPOS 57
- OLSSC_SUP_TRIGSCAN 54
- OLSSC_SUP_WRPMULTIPLE 54
- OLSSC_SUP_WRPSINGLE 53
- OLSSC_SUP_ZEROSEQUENTIAL_C
GL 55
- OLSSCE_BASECLOCK 57
- OLSSCE_MAX_THROUGHPUT 58
- OLSSCE_MAXCLOCKDIVIDER 57
- OLSSCE_MAXRETRIGGER 55
- OLSSCE_MIN_THROUGHPUT 58
- OLSSCE_MINCLOCKDIVIDER 58
- OLSSCE_MINRETRIGGER 55
- one-shot pulse output 47, 58
- Open Layers Control Panel applet 8,
36, 60, 100
- operation modes
 - continuous digital I/O 36
 - continuous scan 18
 - externally retriggered scan 21
 - internally retriggered scan 20
 - single-value analog input 17
 - single-value analog output 30
 - single-value digital I/O 36
 - triggered scan 19
 - waveform generation 32
- output
 - channel list 27
 - clock sources 29
 - pulses 58
 - ranges 28
- Output FIFO Underflow error 34
- outputting pulses 46, 47, 48
- over sample error 25, 34
- overflow error 25

P

- period 46
- physical specifications 112
- ports, digital I/O 35
- positive threshold trigger 57
- post-trigger acquisition mode 53
- power specifications 112
- pre-trigger acquisition mode 53
- programmable gain 55
- pseudo-differential inputs 8
- pulse output
 - how to perform 81
 - one-shot 47
 - rate generation 46
 - repetitive one-shot 48
 - types 41
- pulse width 41, 46

Q

- Quick Data Acq application 4

R

- random channel-gain list 55
- ranges
 - analog input 14
 - analog output 28
 - number of 56
- rate generation 46, 58
- repetitive one-shot pulse output 48, 58
- resetting an operation 95
- resolution
 - analog input 7
 - analog output 26
 - number of 56
- retrigger clock frequency 55, 87

retriggered scan mode 20, 21, 87

S

sample clock sources 16
sample rate 18, 20
scan mode
 externally retriggered 21
 internally retriggered 20
scan operations, analog input 17
scan per trigger 54
sequential channel-gain list 55
service and support procedure 101
simultaneous clocking 57
simultaneous operations 83
simultaneous start list 53
single buffer wrap mode 53, 88, 89
single channel
 analog input 9
 analog output 27
single-ended channels 7, 56
 number of 56
single-value operations 53, 65
 analog input 17
 analog output 30
 digital I/O 36
 how to perform 65
software trigger 23, 28, 57
specifications 103
 analog input 104
 analog output 106
 clocks 111
 counter/timer specifications 109
 digital I/O 108
 environmental 112
 physical 112
 power 112

triggers 110
stopping an operation 17, 31, 95
synchronous digital I/O 55, 85
 maximum value 55

T

technical support 101
threshold trigger 57
throughput
 maximum 58
 minimum 58
transferring data
 analog input 23
 analog output 33
triggered scan 19, 54, 87
 extra retrigger 54
 internal retrigger 54
 number of scans per trigger 54
 retrigger frequency 55
 scan per trigger 54
 setting up 87
triggers 86, 87
 analog input 22
 analog threshold 23, 29, 57
 external 23, 29, 57
 number of extra 57
 setting parameters for 86
 software 23, 28, 57
 specifications 110
troubleshooting
 procedure 98
 service and support procedure 101
 troubleshooting table 99
TTL trigger 23, 29

U

underflow error [34](#)
units, counter/timer [38](#)
up/down counting [43](#), [58](#)

V

voltage ranges [14](#)
 number of [56](#)

W

waveform generation mode [32](#)
Windows messages [53](#)
wrap mode [88](#), [89](#)
 analog input [24](#)
 analog output [33](#)

Z

zero start sequential channel-gain list
[55](#)

Specifications are subject to change without notice.
All Keithley trademarks and trade names are the property of Keithley Instruments, Inc.
All other trademarks and trade names are the property of their respective companies.

KEITHLEY

A G R E A T E R M E A S U R E O F C O N F I D E N C E

Keithley Instruments, Inc.

Corporate Headquarters • 28775 Aurora Road • Cleveland, Ohio 44139 • 440-248-0400 • Fax: 440-248-6168 • 1-888-KEITHLEY (534-8453) • www.keithley.com